


# HYUNDAI SEASALL

## INSTALLATION & OPERATION MANUAL S250S, S250P, S250J, S220S, S220P SERIES ENGINES



powering **marine** safety

Aabenraavej 13-17, DK - 6340 Krusaa, Denmark  
Tel: +45 74 62 20 88  
Fax +45 74 62 74 07  
E-mail: [bukh@bukh.dk](mailto:bukh@bukh.dk) - Internet: [www.bukh.dk](http://www.bukh.dk)

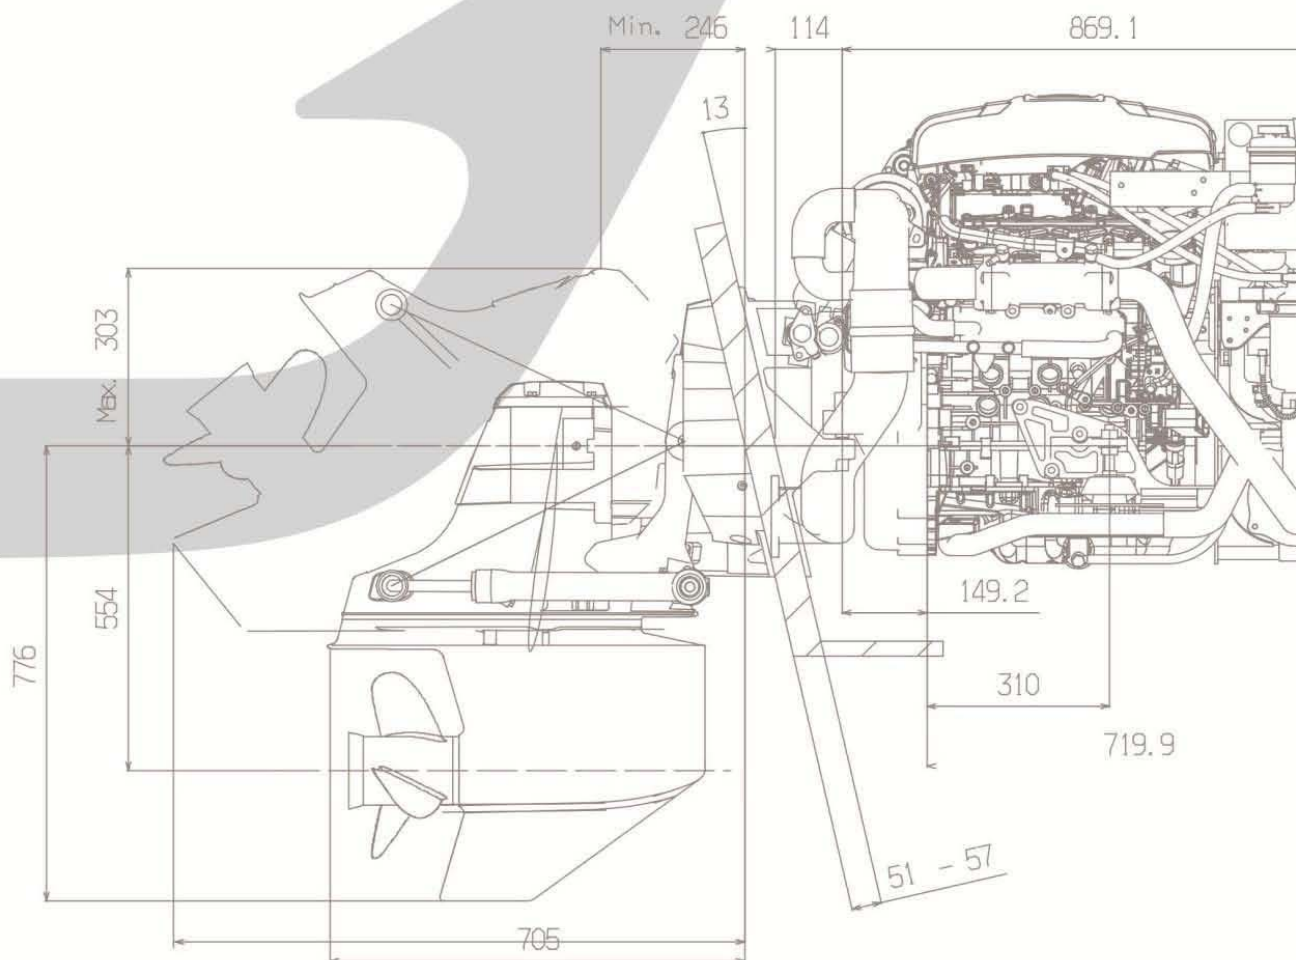

Applicable to S250S, S250P, S250J, S220S, S220P model



TABLE OF CONTENTS

ABOUT THIS MANUAL ..... 3

SAFETY PRECAUTIONS ..... 4

APPROXIMATE CONVERSIONS FROM STANDARD..... 5

CHAPTER 1 ENGINE OVERVIEW ..... 6

    1. ENGINE COMPONENTS ..... 7

    2. ENGINE SUSPENSION ..... 8

    3. ENGINE IDENTIFICATION ..... 9

    4. SCHEMATIC DIAGRAM OF COMMON RAIL DIESEL ENGINE ..... 10

    5. TECHNICAL DATA ..... 11

    6. PERFORMANCE CURVES ..... 12

    7. BELT INSTALLATION & ENGINE DIMESIONS..... 13

CHAPTER 2 ENGINE MOUNT SYSTEM ..... 17

    1. ENGINE MOUNTING REQUIREMENTS ..... 17

    2. MOUNT DIMENSIONS ..... 18

    3. ENGINE MOUNT TOOL FOR STERNDRIVE MODEL ..... 18

CHAPTER 3 COOLING & EXHAUST SYSTEM ..... 19

    1. SCHEMATIC DIAGRAM OF ENGINE COOLING CIRCUIT ..... 19

    2. SEAWATER FLOW..... 20

        2.1 WATER PICKUP ..... 20

        2.2 SEAWATER STRAINER ..... 20

        2.3 SEAWATER PUMP ..... 21

    3. ENGINE COOLANT FLOW..... 23

        3.1 ENGINE COOLANT ..... 23

        3.2 REMOVING AIR BUBBLES..... 25

        3.3 CABIN HEATER CONNECTION ..... 25

    4. EXHAUST SYSTEM ..... 26

CHAPTER 4 FUEL SYSTEM ..... 27

    1. FUEL FLOW..... 28

    2. LOW PRESSURE FUEL LINE ..... 28

    3. ACCELERATION SENSOR AND CONTROL LEVER ..... 29

    4. RECOMMENDED FUEL QUALITY ..... 30

    5. DRAINING WATER FROM FUEL FILTER ..... 30

CHAPTER 5 AIR INTAKE SYSTEM ..... 31

    1. ENGINE ROOM VENTILATION ..... 31

    2. AIR FILTER MAINTENANCE ..... 32

CHAPTER 6 LUBRICATION SYSTEM ..... 33

    1. ENGINE OIL FLOW..... 33

    2. ENGINE OIL LEVEL CHECKS ..... 34

    3. RECOMMENDED OIL QUALITY ..... 34

    4. ENGINE OIL EXTACTION PUMP ..... 35

    5. OIL FILTER REPLACEMENT ..... 35



TABLE OF CONTENTS

CHAPTER 7 ELECTRICAL SYSTEM ..... 36

1. BATTERY CABLE CONNECTIONS ..... 36

2. BATTERY CHECKS ..... 37

3. FUSE AND RELAY ..... 38

CHAPTER 8 INSTRUMENT SYSTEM ..... 40

1. INSTRUMENT CONNECTIONS ..... 40

2. CUT-OUT FOR GAUGE ..... 43

3. CUT-OUT FOR EOI SYSTEM ..... 43

CHAPTER 9 EOI SYSTEM ..... 43

1. OVERVIEW OF EOI SYSTEM ..... 43

1.1 INFORMATION LCD ..... 43

1.2 SWITCHES ..... 45

1.3 ALARM LAMPS ..... 45

2. EOI CONNECTIONS ..... 46

3. EOI PIN ASSIGNMENT ..... 47

4. NEUTRAL SWITCH AND DUAL EOI CONNECTION ..... 49

5. TRIM WIRING CONNECTION DIAGRAM ..... 50

6. G-SCAN..... 51

7. ALARM AND DTC(DIAGNOSIS TROUBLE CODE) ..... 52

7.1 ALARM AND DTC(DIAGNOSIS TROUBLE CODE) ..... 52

7.2 DTC(DIAGNOSIS TROUBLE CODE) LIST..... 55

CHAPTER 10 ANTI CORROSION SYSTEM ..... 60

CHAPTER 11 ENGINE OPERATION ..... 61

1. ENGINE ON/OFF ..... 61

2. ENGINE BREAK-IN ..... 62

3. EMERGENCY STOP ..... 63

CHAPTER 12 ENGINE STORAGE ..... 64

WINTER STORAGE..... 65

CHAPTER 13 MAINTENANCE ..... 66

1. THE INITIAL RUNNING CHECK..... 67

2. MAINTENANCE SCHEDULE ..... 68

3. STERNDRIVE & TRANSMISSION MAINTENANCE SCHEDULE ..... 69

4. MAINTENANCE LOG..... 69

CHAPTER 14 TROUBLESHOOTING GUIDE ..... 70

CHAPTER 15 WARRANTY ..... 72

WARRANTY REGISTRATION CARD ..... 77

### **ABOUT THIS MANUAL**

This engine installation and operation manual is provided as guidance for the installation of Hyundai SeasAll engine to a boat, and to describe engine operation. Its purpose is to provide technical information to aid in performing an effective engine installation so as to achieve both maximum performance and service life. For information on installation, operation and maintenance of the ZF Marine Transmissions and Sterndrive Bravo Models, please see the separate booklets included in the original packaging of your Hyundai SeasAll purchase.

Hyundai SeasAll is committed to making clear and accurate information available for those who maintain, own and repair the S250 & S220 Series engines. Hyundai SeasAll values your input regarding revisions and additional information for our manuals.

- The manufacturer is not liable for any damages or losses caused by faulty installation, wrong handling of the equipment and/or deficient maintenance.
- The operator is responsible for the correct and safe operation of the engine and safety of its occupants and general public.
- It is strongly recommended that each operator read and understand this manual before installing and operating the engine.
- This manual as well as safety labels posted on the engine use the following safety alerts to draw your attention to special safety instructions that should be followed.



#### **WARNING**

**DEVIATION FROM INSTALLATION INSTRUCTIONS AND OPERATION GUIDELINES MAY LEAD TO PERSONAL INJURY OR DEATH TO OPERATORS AND NEARBY PERSONNEL.**



#### **CAUTION**

**DEVIATION FROM INSTALLATION INSTRUCTIONS AND OPERATION GUIDELINES MAY LEAD TO IMPROPER OPERATION, DAMAGE OR DESTRUCTION OF THE ENGINE.**

## **SAFETY PRECAUTIONS**

- Read and understand this operator's manual as well as other information supplied by Hyundai SeasAll for safe use of these products. Be sure to check your engine regularly.
- Do not use the engine for a purpose other than what is intended by Hyundai SeasAll. Do not modify the performance of the supplied engine without the express permission of Hyundai SeasAll. This can be dangerous, can shorten the life of your engine and can invalidate your warranty.
- Original and genuine parts supplied from Hyundai SeasAll must be used for inspections and maintenance. Hyundai SeasAll does not guarantee any damage caused by the use of imitation parts.
- Engine inspection and maintenance should be carried out by properly trained and factory approved service engineers.
- The engine should be inspected if the electronic engine control unit shuts down the engine.

## **HOT SURFACES AND FLUIDS**

- There is always a risk of burns when working with a hot engine. Be aware of hot parts like the turbocharger system, the exhaust system, hot coolant hoses, etc. Wait until the engine is fully cool to do inspection and maintenance.

## **REFUELING**

- Refuel only after the engine completely stops.
- Use only the recommended fuel. The wrong grade of fuel can cause operating problems, can cause the engine to stop and can cause engine damage.
- Pay special attention to safe practices when refueling.

## **PAINT DAMAGE**

- Damage of the engine or parts paint during maintenance and inspection can cause corrosion. Any damage must be repainted after inspection and maintenance.

## **WELDING ON ENGINE**

- Welding directly on the engine block can cause damage to the engine control systems. The ECU and related electronic devices must be disconnected and removed if unavoidable welding is needed.



# INSTALLATION & OPERATION MANUAL


## S250 and S220 Series Engines

HYUNDAI SEASALL


APPROXIMATE CONVERSIONS FROM STANDARD							
	SYMBOL	MULTIPLY BY	SYMBOL		SYMBOL	MULTIPLY BY	SYMBOL
LENGTH	mm	0.039	inch	LENGTH	inch	25.4	mm
	cm	0.4	inch		inch	2.54	cm
	m	3.28	ft		ft	0.3048	m
AREA	mm <sup>2</sup>	0.0016	in <sup>2</sup>	AREA	in <sup>2</sup>	645.2	mm <sup>2</sup>
	m <sup>2</sup>	10.764	ft <sup>2</sup>		ft <sup>2</sup>	0.093	m <sup>2</sup>
VOLUME	cm <sup>3</sup>	0.061	in <sup>3</sup>	VOLUME	in <sup>3</sup>	16.388	cm <sup>3</sup>
	mL	0.06	in <sup>3</sup>		in <sup>3</sup>	16	mL
	Ldm <sup>3</sup>	61.023	in <sup>3</sup>		in <sup>3</sup>	0.016	Ldm <sup>3</sup>
	Ldm <sup>3</sup>	0.22	imp.gallon		imp.gallon	4.545	Ldm <sup>3</sup>
	Ldm <sup>3</sup>	0.264	U.S.gallon		U.S.gallon	3.785	Ldm <sup>3</sup>
	m <sup>3</sup>	0.76	yd <sup>3</sup>		yd <sup>3</sup>	1.3	m <sup>3</sup>
	m <sup>3</sup>	35.315	ft <sup>3</sup>		ft <sup>3</sup>	0.028	m <sup>3</sup>
FORCE	kgf	2.204	lbf	FORCE	lbf	0.453	kgf
	N	0.224	lbf		lbf	4.448	N
TEMP.	°F=9/5x°C+32			TEMP.	°C=5/9x(°F-32)		
PRESSURE	Bar	14.5	psi	PRESSURE	psi	0.068	Bar
	MPa	145	psi		psi	0.0068	MPa
	Pa	0.102	mmWc		mmWc	9.807	Pa
	Pa	0.004	inWc		inWc	249.098	Pa
	KPa	4	inWc		inWc	0.249	KPa
	mWg	39.37	inWc		inWc	0.025	mWg
TORQUE	Nm	0.738	lbf ft	TORQUE	lbf ft	1.356	Nm
WEIGHT	kg	2.205	lb	WEIGHT	lb	0.454	kg
	kg	35.273	oz		oz	0.028	kg
WORK	kJ/kWh	0.43	BTU/lb	WORK	BTU/lb	2.326	kJ/kWh
	MJ/kg	430	BTU/lb		BTU/lb	0.0023	MJ/kg
	kJ/kg	0.24	Kcal/kg		Kcal/kg	4.184	kJ/kg
ENERGY	kJ/kg	0.697	BTU/hph	ENERGY	BTU/hph	1.435	kJ/kg
FUEL CONSUMP.	g/kWh	0.736	g/hph	FUEL CONSUMP.	g/hph	1.36	g/kWh
	g/kWh	0.0016	lb/hph		lb/hph	616.78	g/kWh
FLOW RATE (GAS)	m <sup>3</sup> /h	0.588	ft <sup>3</sup> /min	FLOW RATE (GAS)	ft <sup>3</sup> /min	1.699	m <sup>3</sup> /h
FLOW RATE (LIQUID)	m <sup>3</sup> /h	4.403	US gal/min	FLOW RATE (LIQUID)	US gal/min	0.2271	m <sup>3</sup> /h
SPEED	m/s	3.281	ft/s	SPEED	ft/s	0.3048	m/s
	kph	0.539	knots		knots	1.852	kph
	mph	0.869	knots		knots	1.1508	mph
	kph	0.62	mph		mph	1.61	kph

**CHAPTER 1**  
**ENGINE OVERVIEW**

**1. ENGINE COMPONENTS**

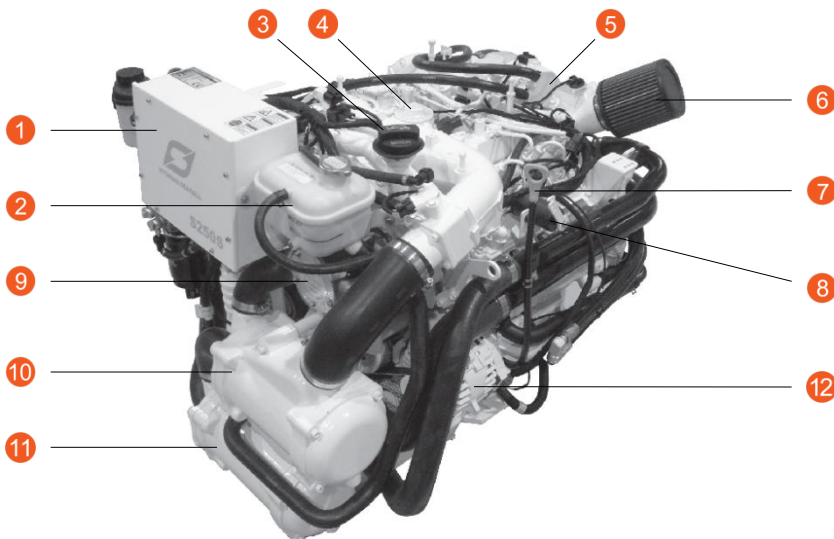


- |                           |                              |
|---------------------------|------------------------------|
| 1. ECU Box                | 7. Engine Oil Gauge          |
| 2. Coolant Expansion Tank | 8. Acceleration Lever Sensor |
| 3. Engine Oil Cap         | 9. Seawater Pump             |
| 4. Engine Oil Filter      | 10. Intercooler              |
| 5. E-VGT & Cooler         | 11. Heat Exchanger           |
| 6. Air Filter             | 12. Alternator               |

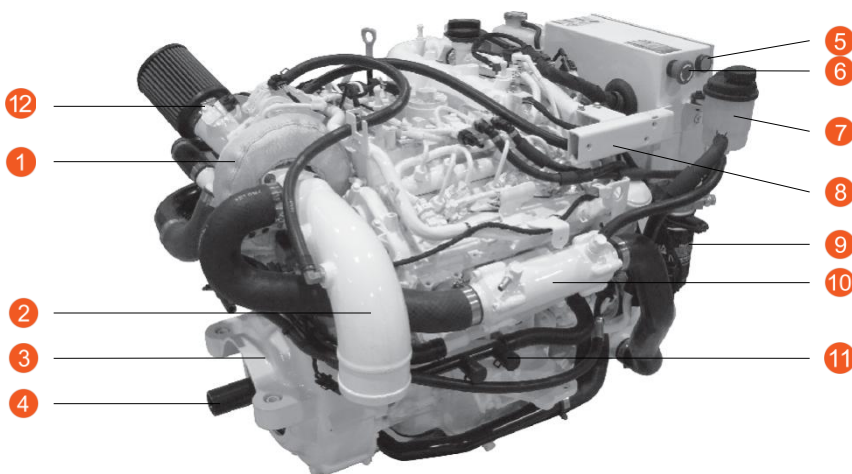

- |                                     |   |
|-------------------------------------|---|
| 1. Turbo Heat Protector             | 7. P/STRG Oil Reservoir Tank(Sterndrive Model)  |
| 2. Exhaust Elbow                    | 8. Shift Plate (Sterndrive Model)               |
| 3. Bell Housing (Sterndrive Model)  | 9. Main Fuel Filter with Water Detection Sensor |
| 4. Drive Coupler (Sterndrive Model) | 10. T/M Oil Cooler or P/STRG Oil Cooler         |
| 5. Engine Oil Exchange Button       | 11. Cabin Heater Connector                      |
| 6. Engine Emergency Stop Button     | 12. BPS & IATS                                  |

### 2. ENGINE SUSPENSION

- 1) To lift the engine, first remove the engine cover. You will find three engine eyes (see figure).
- 2) To avoid engine damage, take care that engine lift chains or belts do not hit or touch surrounding parts during engine lifting.

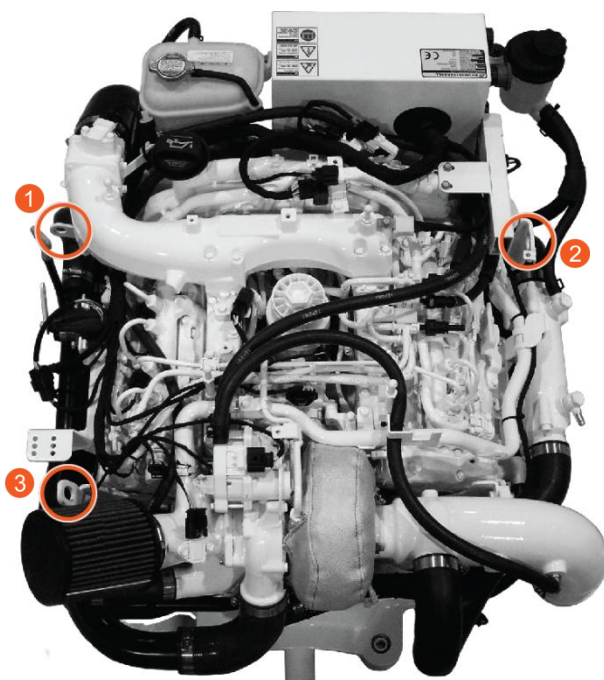




**3. ENGINE IDENTIFICATION**

Engine identification is affixed to the engine block and the ECU box (see figure).

▪ **SERIAL NUMBER ON THE ENGINE BLOCK**




▪ **NAME PLATE ON THE ECU BOX**

 <b>HYUNDAI SEASALL</b>	
<b>Hyundai SeasAll Co., Ltd.</b>	
Engine Type	S250
Engine Family	D6EA
Rated Power	250ps/3800rpm
Engine Weight	334kg
Max RPM	4200
No. of cylinders	6
Cylinder bore (mm)	84
Piston stroke (mm)	89
Engine Serial No.	



Worldwide

 <b>HYUNDAI SEASALL</b>	
<b>MARINE ENGINE EMISSION CONTROL INFORMATION</b>	
Conforms to	Tier 2 : NOx+THC 7.5, CO 5.0, PM 0.4 g/kWh
Model Year	2011
Engine Family	BHYSN2.96S25
Engine Model	S250S
Rated power/Speed	184 kW/3800 rpm
Idle Speed	680 rpm
Displac./Cyl	0.49 liters
Useful-life	Acc. to 94.9(a)(1)
Propulsion System	Sterndrive

•This engine conforms to model year 2011 U.S. EPA Regulation 40 CFR part 94 Control of Air Pollution from Marine Compression Ignition engines.


•This engine is categorized as a recreational marine engine under 40 CFR part 94. Installation of this engine in any nonrecreational vessel is a violation of federal law subject to civil penalty.

HYUNDAI SEASALL Co., Ltd. Made in Korea

Only USA



### 4. SCHEMATIC DIAGRAM OF COMMON RAIL DIESEL ENGINE

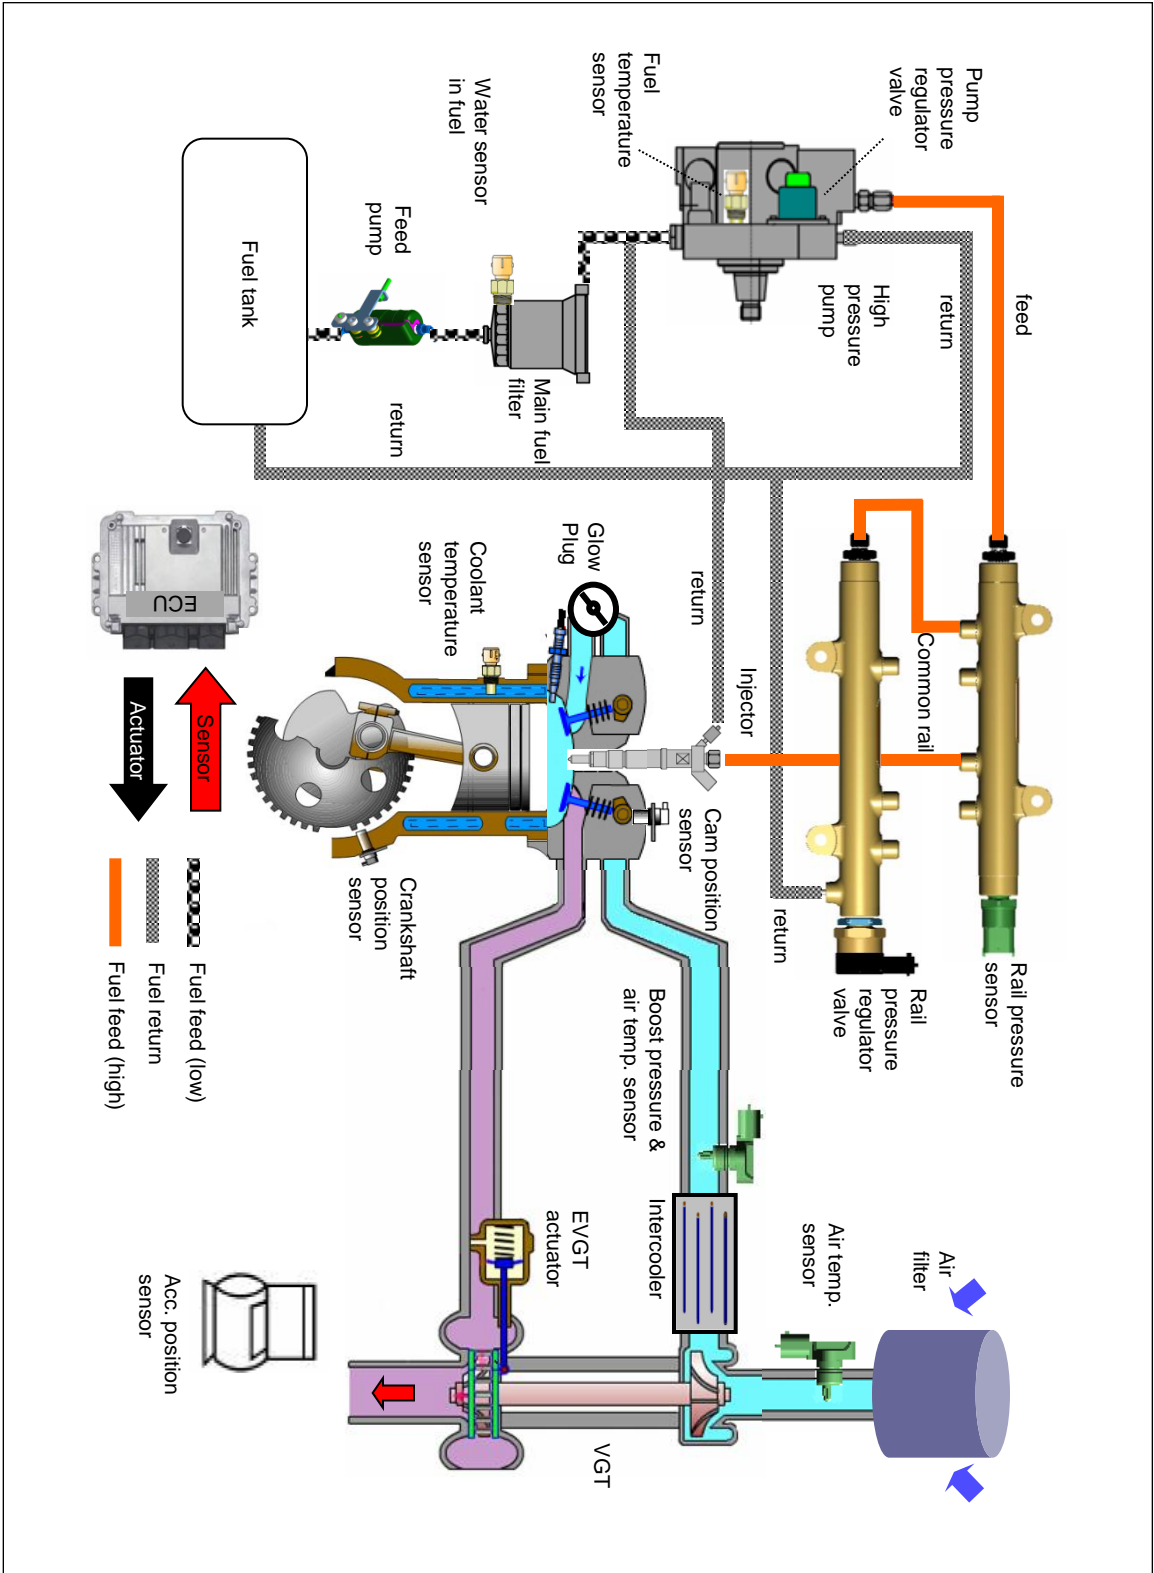



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL


### 5. TECHNICAL DATA

	S250 / 220S	S250 / 220P	S250J
Engine type	4-stroke, 4-valve		
	After-cooled, direct-injection, water cooling		
Output PS(kW)	250PS (184) / 220PS (162)		
rpm at full load	3800/3200		
Cylinders	V-6		
Ignition sequence	1-2-3-4-5-6		
Displacement [cm <sup>3</sup> ]	2959		
Bore [mm]	84		
Stroke [mm]	89		
Compression ratio	17.5 : 1		
Max. torque [kgm] @ speed [rpm]	50		48
	2000~3000		3500
Injection system	Common rail direct injection (Piezo injector)		
Diesel fuel	at least CN 51 as per DIN EN 590		
Intake air pressure (abs. bar) @ speed [rpm]	2.5	2.5	2.5
	3800/3200	3800/3200	3800
Coolant quantity (liter)	11.5		
Coolant cap opening pressure (bar)	1.1		
Engine oil (liter)	7.2		
Engine oil pressure (bar)	2~3 at 1750rpm, 100 °C(oil temp.)		
Exhaust gas pressure (kPa)	Max. 50		
Alternator [A]	150		
Engine diagnosis	Yes		
Weight(kg)	334		
Battery capacity (AH)	12V, 200AH recommended		
Thermostat opening temp. (°C)	82 (starting to open), 92 (fully open)		
Idle rpm warmed up (rev/min)	680		
Permissible eng. oil temp (°C)	137		
Permissible eng. coolant temp (°C)	105		
Propulsion system	Sterndrive	Shaftdrive	Waterjet




### 6. PERFORMANCE CURVE

#### ▪ S250S & S250P MODEL

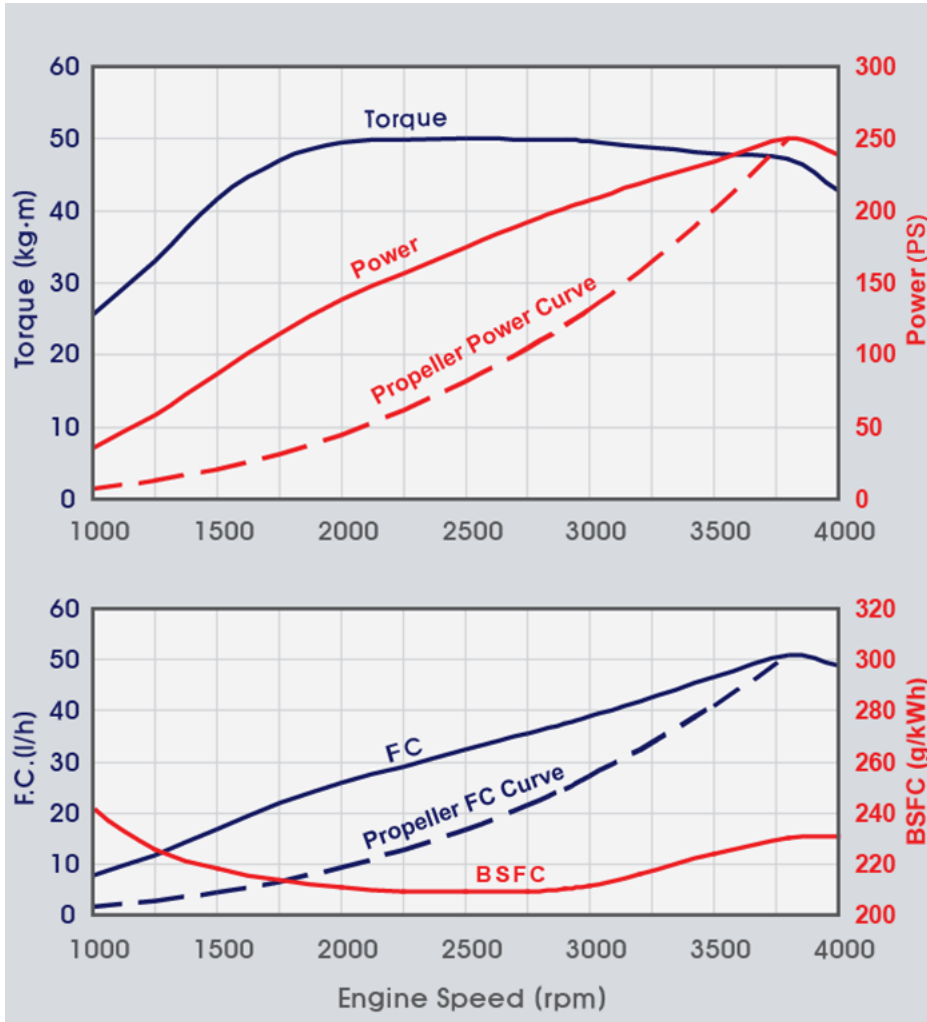


\*BSFC : Brake Specific Fuel Consumption      \*FC : Fuel Consumption

▪ S250J MODEL

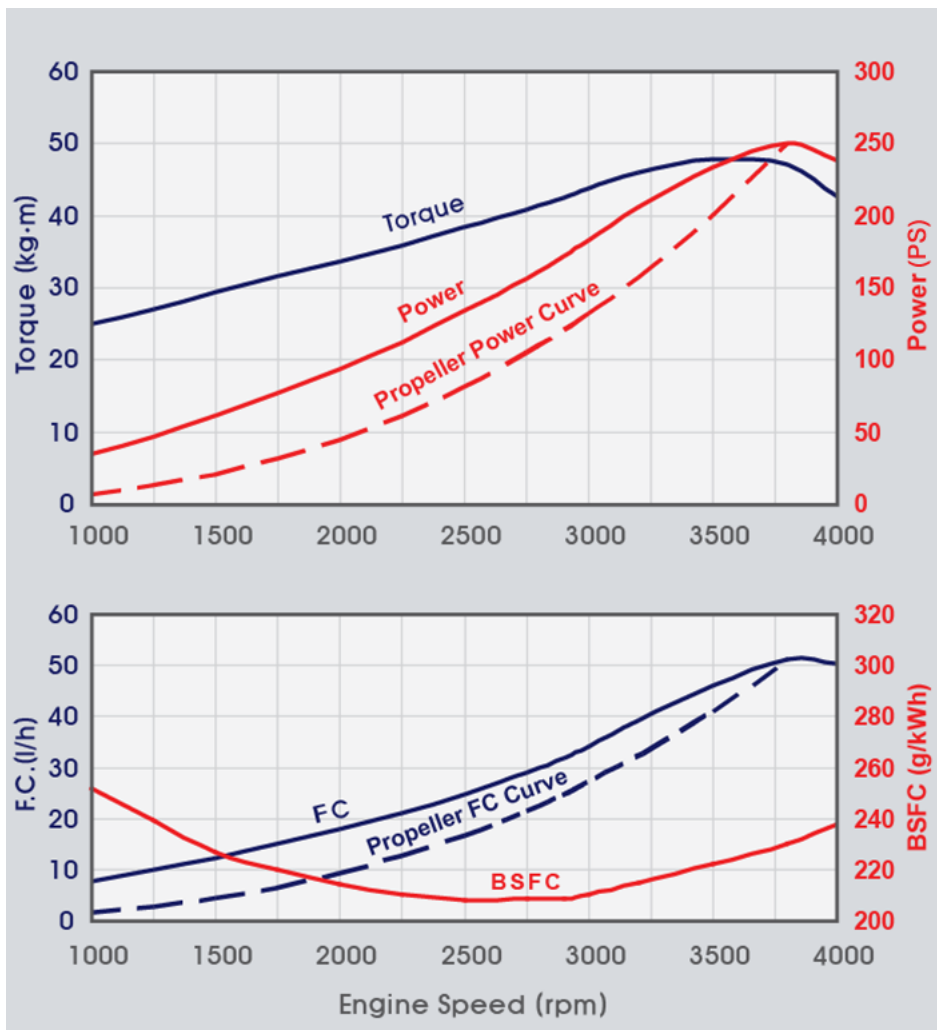

\*BSFC : Brake Specific Fuel Consumption      \*FC : Fuel Consumption

▪ S220S & S220P MODEL

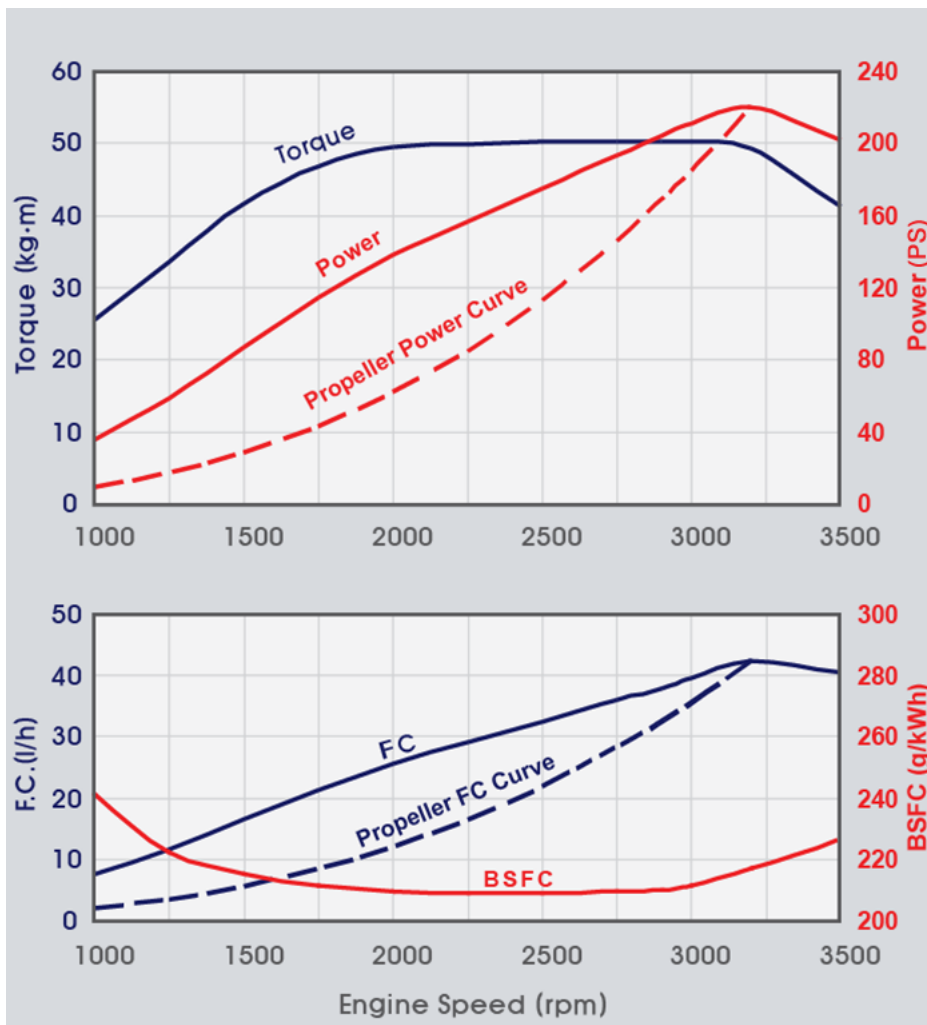


\*BSFC : Brake Specific Fuel Consumption      \*FC : Fuel Consumption



### 7. BELT INSTALLATION & ENGINE DIMENSIONS

#### ▪ V-RIBBED BELT INSTALLATION

MODEL : S-ENG SERIES	
AN	ALTERNATOR
DP	DRIVE PULLEY
IP	IDLER PULLEY
PS	POWER STEERING
TP	TENSIONER PULLEY
WP	WATER PUMP PULLEY


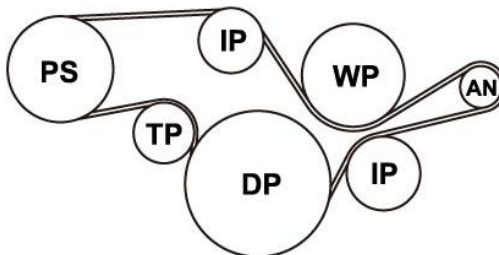


#### ▪ MerCruiser Bravo One X Diesel

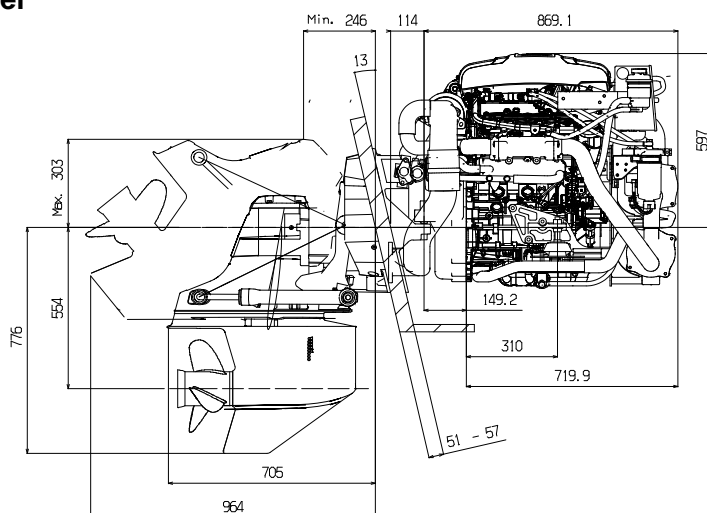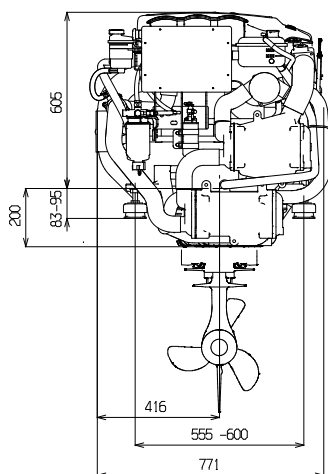

Side view


#### ▪ MerCruiser Bravo Two X Diesel

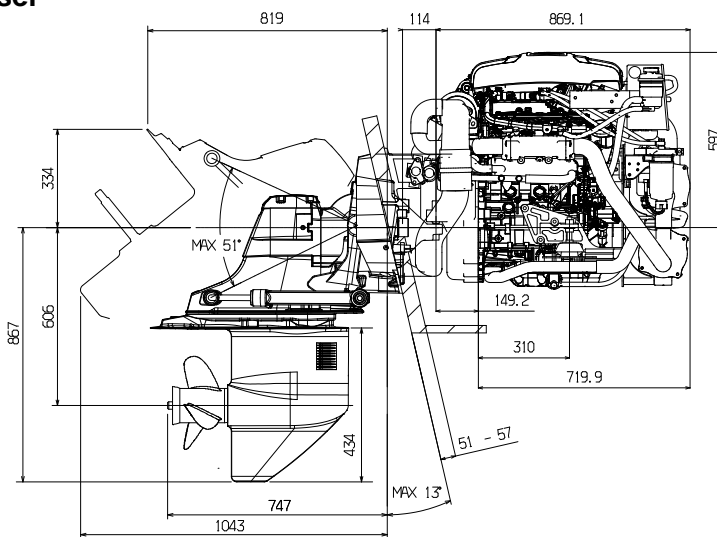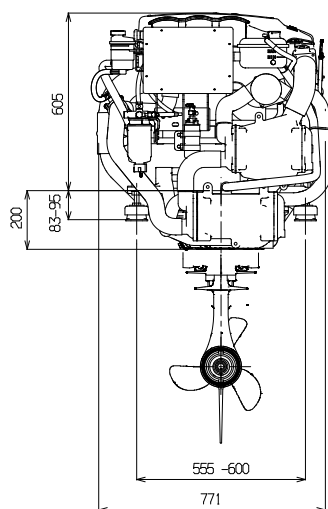


Front view

Side view

▪ **MerCruiser Bravo Three X Diesel**

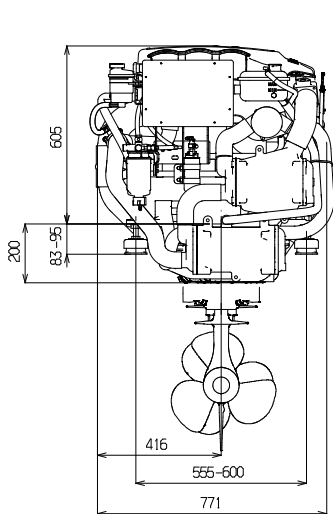


Front view

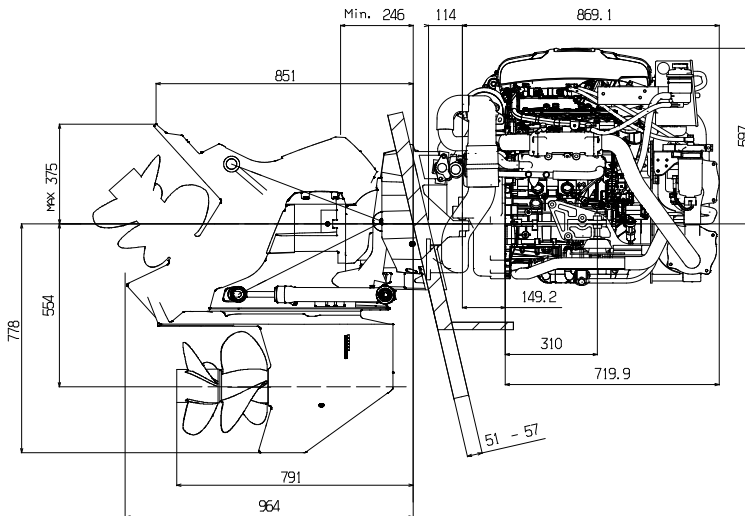


Side view

▪ **ZF 63 A**

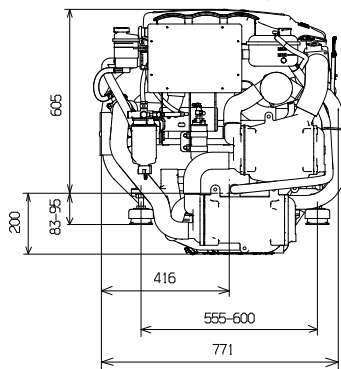


Front view

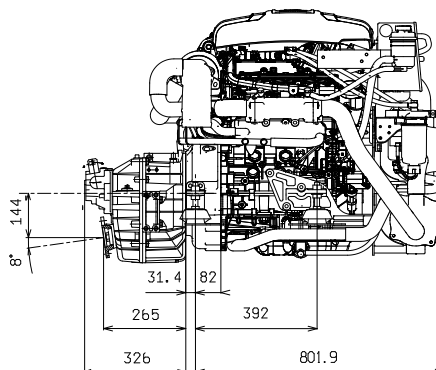


Side view



▪ ZF 63 C

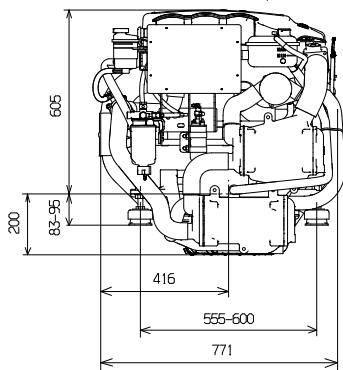


Front view

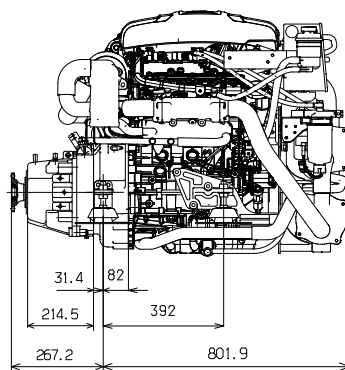


Side view

▪ Waterjet adapter without ZF 45C / ZF 63C

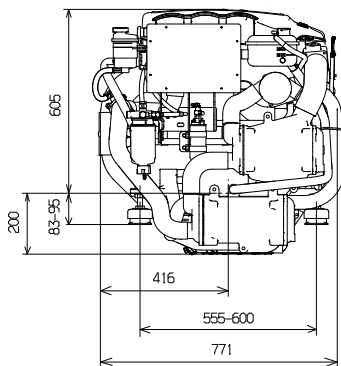

Front view

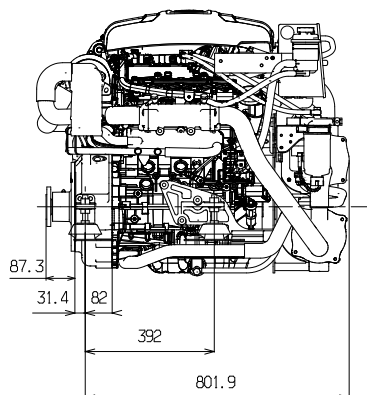

Side view


### CHAPTER 2

### ENGINE MOUNT SYSTEM

#### 1. ENGINE MOUNTING REQUIREMENTS

- The mount must be strong enough to carry the loads applied by the weight and power of the engine. It also must be stiff enough that the engine does not sag or move too much when power is applied.
- The mount must position the engine at the correct height and angle so that the engine's thrust line suits the boat.


#### 2. ENGINE MOUNT DIMENSIONS

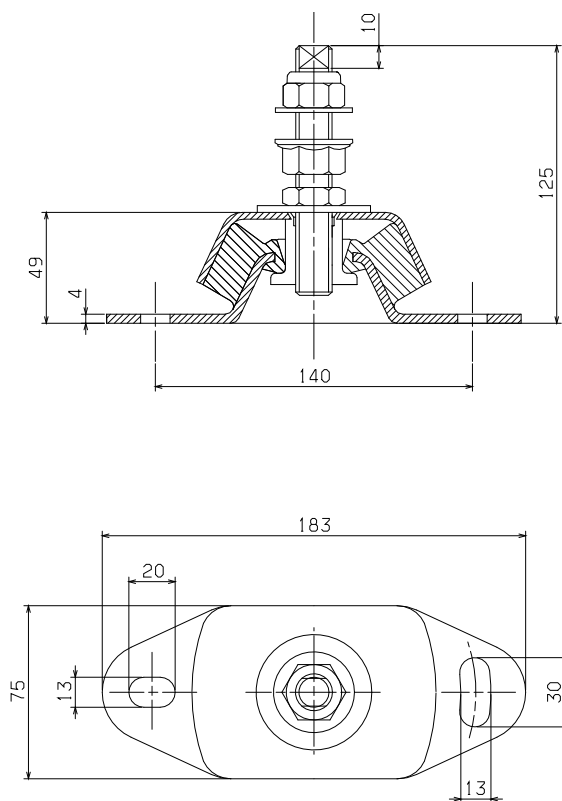

### CAUTION

USE ONLY THE ORIGINAL HYUNDAI SEASALL MOUNTINGS THAT WERE SUPPLIED WITH THE INITIAL PURCHASE. AFTER INSTALLATION AND ALIGNMENT OF THE ENGINE, MAKE SURE THAT NO RESIDUAL TENSION EXISTS IN THE DRIVETRAIN.

**3. INTALLATION TOOL FOR STERNDRIVE MODEL**

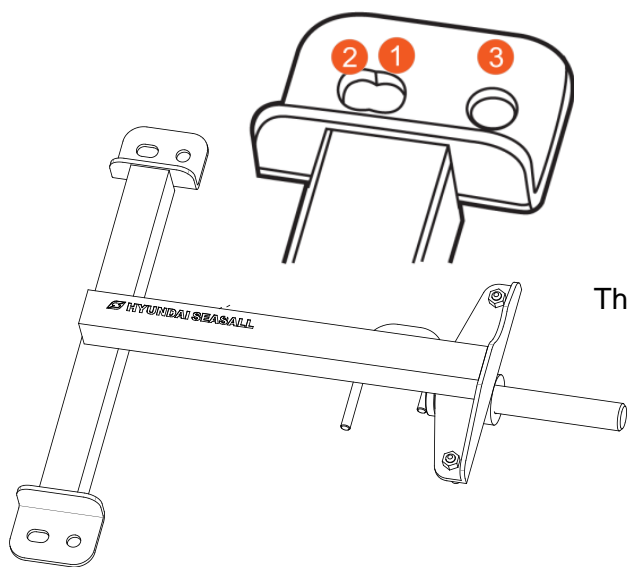

The genuine alignment tool of Hyundai-Seasall(Five step)



The alignment tool of MerCruiser(Four step)

- ① Mount hole for U125 model
- ② Mount hole for D170 and D150 model
- ③ Mount hole for S250 and S220 model

**CAUTION**



IT IS ESSENTIAL THAT THE ENGINE BED IS PERFECTLY FLAT BEFORE USING ENGINE MOUNT TOOL.

FOR INFORMATION ON INSTALLATION OF THE STERNDRIVE BRAVO MODELS, PLEASE SEE THE SEPARATE BOOKLETS INCLUDED IN THE ORIGINAL PACKAGING OF YOUR HYUNDAI SEASALL PURCHASE. HYUNDAI SEASALL ENGINES MUST BE USE THE GENUINE ALIGNMENT TOOL OF HYUNDAI SEASALL OTHER THE DRIVE COUPLER WILL BE DAMAGED.





**2. THE FLOW OF SEAWATER – OPEN COOLING CIRCUIT**

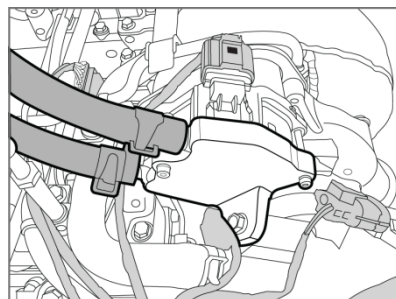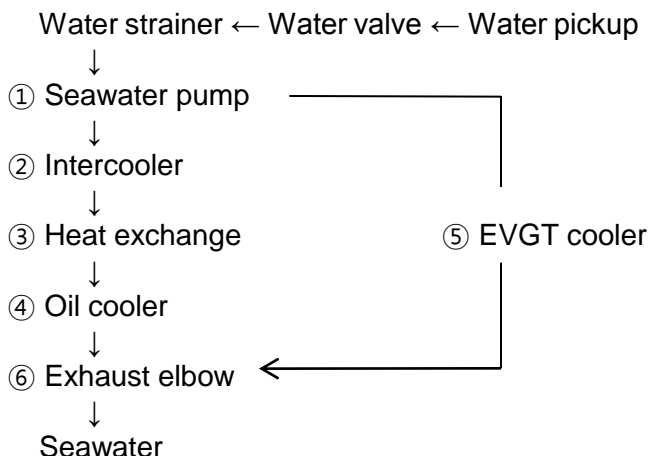


EVGT cooler

**2.1 WATER PICKUP**

- 1) Water pickup should be installed in an area where it won't pickup air bubbles and will access fresh water during the duration of engine operation.
- 2) For use in sterndrive models, please see the section "Installing Sterndrive Seawater Pickup" of the BRAVO MODELS INSTALLATION MANUAL, included in the original packaging.
- 3) For further safety, you can use an additional transom or bottom type water pickup.

**2.2 WATER STRAINER**

- 1) Strainer should be located in an area where it will be easily accessible for periodic seawater flow inspection and cleaning.
- 2) The size of strainer must be of sufficient capacity to pass the seawater (a flow rate over 200 liters per minute flow rate).
- 3) Strainer must be installed after water inlet valve in order to allow user to shut off seawater when cleaning strainer filter.

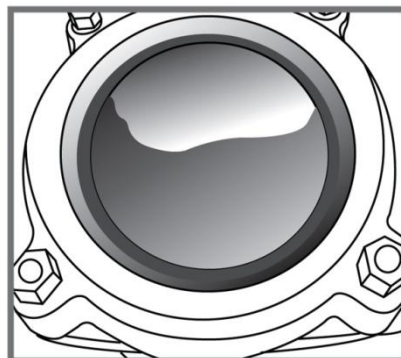

**CAUTION**



**IF ASSEMBLY IS NOT CONDUCTED PROPERLY, AIR CAN BE SUCKED IN, DISTURBING THE VACUUM PROCESS. THIS CAN CAUSE THE ENGINE TO OVERHEAT.**



4) To clean strainer filter,

- Stop the engine and close the water valve
- Remove the filter cap
- Remove the filter element, flush it thoroughly with clean water or compressed air
- Insert the cleaned filter element and screw the filter cap
- Check the cap and the gasket for correct seating and sealing
- Open the water valve
- Start the engine and check if there is water leakage

2.3 SEAWATER PUMP

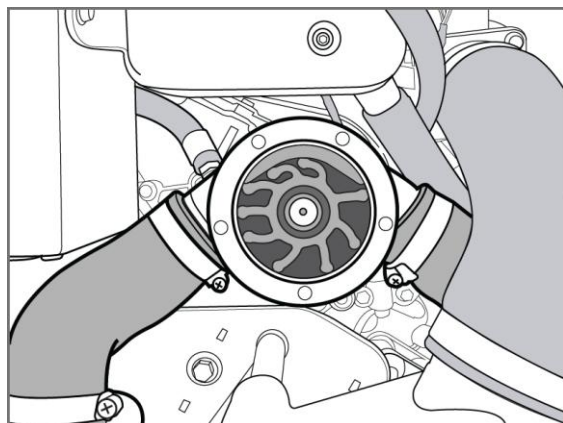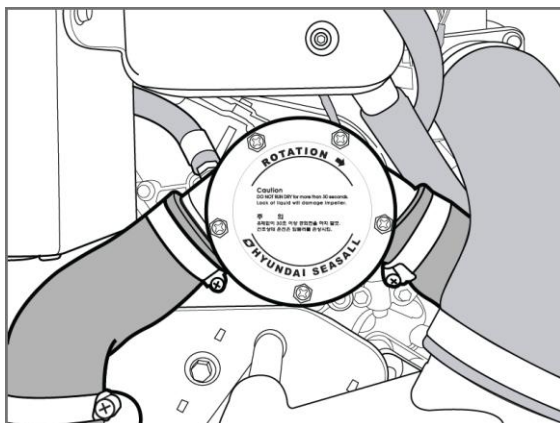

- The internal diameter of hose connected to seawater pump inlet should be 45~46mm.
- The cross section of hose may shrink due to inlet pressure drop. Therefore, the hose from water pickup in the boat's hull to seawater pump inlet should be as short as possible and must be made of steel wire reinforced material.
- The seawater pump impeller must be checked periodically and replaced if necessary.



**CAUTION**

IF ASSEMBLY IS NOT CONDUCTED PROPERLY, AIR CAN BE SUCKED IN, DISTURBING THE VACUUM PROCESS. THIS CAN CAUSE THE ENGINE TO OVERHEAT.

## CHECKING SEA WATER PUMP & IMPELLER

- Stop the engine and close the water valve
- Remove the impeller housing cover
- Remove the impeller from inside the seawater pump
- Check the condition of impeller and bushing
- Apply soapy water to impeller when assembling, and reassemble towards rotation direction
- Replace of the O-ring on the impeller housing cover
- Open the water valve
- Start the engine and check if there is water leakage



### CAUTION

DO NOT RUN THE ENGINE WITHOUT SEAWATER. THE SEAWATER PUMP IMPELLER WILL BE DAMAGED. BEFORE STARTING THE ENGINE, BE SURE TO SUPPLY SEAWATER TO THE PASSAGES.



### CAUTION

IMPELLER DAMAGE MAY OCCUR IF APPROPRIATE TOOLS ARE NOT USED WHEN REMOVING THE IMPELLER. MAKE SURE TO CHECK O-RING CONDITION AFTER SEAWATER PUMP REASSEMBLY.





### CAUTION



DO NOT INSTALL ADDITIONAL DEVICES WHICH COULD OBSTRUCT THE FLOW OF SEAWATER. THIS CAN CAUSE THE ENGINE TO OVERHEAT.

**3. THE FLOW OF ENGINE COOLANT – CLOSED COOLING CIRCUIT**

▪ **THERMOSTAT CLOSED CONDITION**

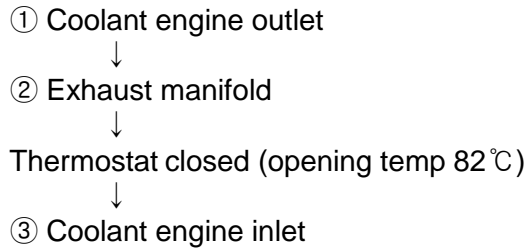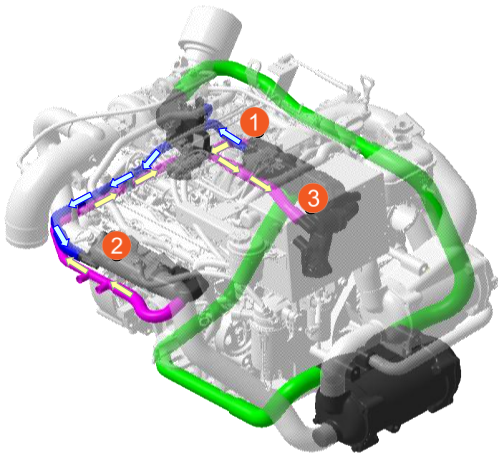


▪ **THERMOSTAT OPENED CONDITION**

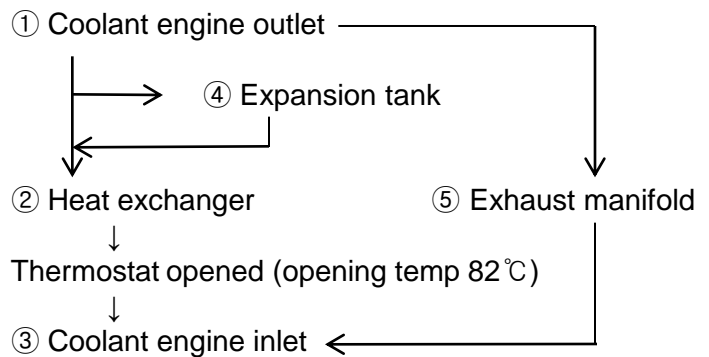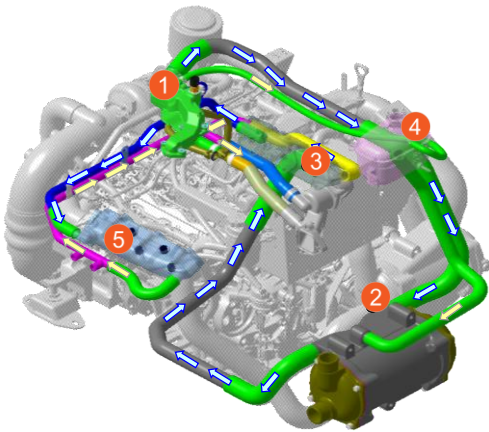

**3.1 ENGINE COOLANT**

- 1) The high-pressure cooling system has a reservoir filled with year-round antifreeze coolant. The reservoir is filled at the factory.
- 2) The coolant level should be between MAX and MIN marks on the side of the coolant reservoir when the engine is cool.

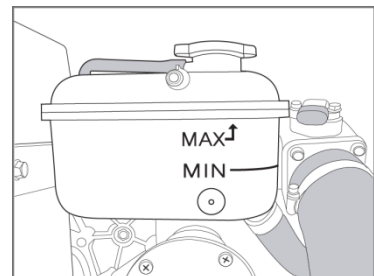




- 3) If the coolant level is low, add enough specified coolant to provide protection against freezing and corrosion. Bring the level to MAX, but do not overfill.
- 4) If frequent additions are required, see an authorized dealer for a cooling system inspection.
- 5) Use only soft (demineralized) water in the coolant mixture.
- 6) The engine has aluminum engine parts and must be protected by an ethylene-glycolbased coolant to prevent corrosion and freezing.
- 7) DO NOT USE alcohol or methanol coolant or mix them with the specified coolant.
- 8) DO NOT USE a solution that contains more than 60% antifreeze or less than 35% antifreeze, which would reduce the effectiveness of the solution.
- 9) For mixture percentages, refer to the following table:

Ambient Temperature	Mixture Percentage(volume)	
	Antifreeze	Water
-15°C°(5°F)	35	65
-25°C°(13°F)	40	60
-35°C°(31°F)	50	50
-45°C°(49°F)	60	40

- 10) In order to drain engine coolant, please use a screwdriver to loosen the drain plug
  - ①.The drain plug is located under the heat exchanger unit.

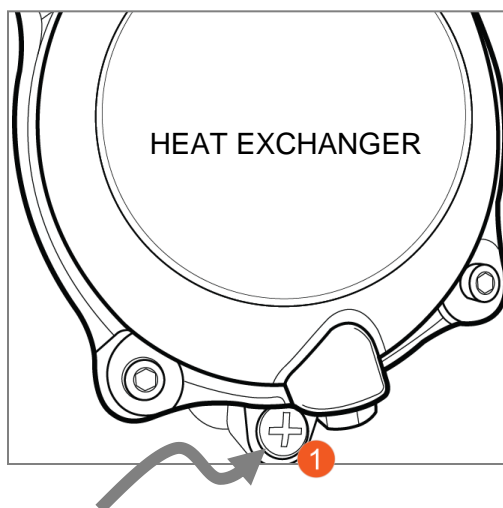


Engine coolant drain plug

### 3.2 REMOVING AIR BUBBLES IN COOLANT LINE

- 1) Start the engine and warm it up at a low rpm (up to thermostat opening)
- 2) Next, stop the engine and allow the engine to cool enough, and then open the cap of the expansion tank carefully.  
\*NOTE: Never open the cap when the engine is hot. Doing so may cause scalding.
- 3) Refill with coolant if needed.
- 4) Recap the expansion tank.
- 5) Please check the level of expansion tank regularly while driving.

### 3.3 CABIN HEATER CONNECTION

- 1) In order to use cabin heater, an extra coolant circulation pump is needed.
- 2) After connecting cabin heater lines, engine coolant must be refilled and checked.
- 3) Please check coolant flow direction, as shown in figure.
- 4) If in doubt, please contact your nearest Hyundai SeasAll dealer.

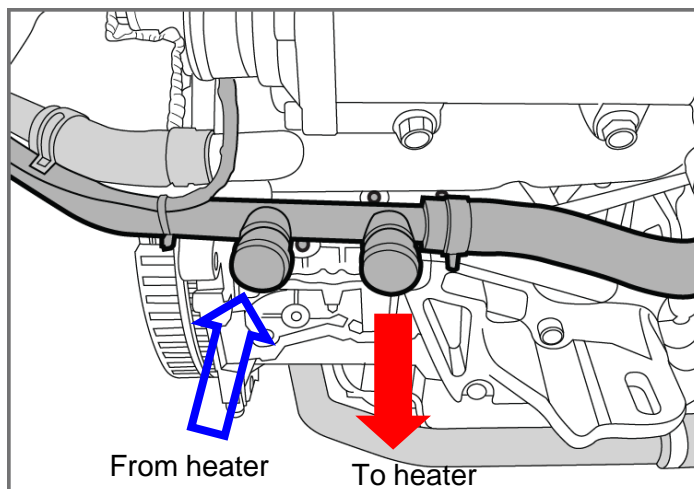

\* Outer diameter of line is  $\varnothing 17.3$  mm




### WARNING

NEVER OPEN THE EXPANSION TANK CAP WHEN THE ENGINE IS OPERATING OR HOT. IT MAY CAUSE ENGINE DAMAGE AND COULD RESULT IN SERIOUS PERSONAL INJURY.

#### 4. EXHAUST SYSTEM


- 1) Your Hyundai Seasall engine's exhaust system consists of a coolant-cooled exhaust manifold and a seawater-cooled exhaust elbow (water injected wet exhaust system).
- 2) The vessel's exhaust pipe line should not be made too long or to bend. The maximum back pressure of the exhaust gas should be under 360 mbar.
- 3) Make sure that the shortest height between bottom of the exhaust elbow and the center of the crank axis is 36cm.
- 4) If the distance between the bottom of the exhaust elbow and the waterline is less than 15cm, or if the waterline is above the water injection point, there is a risk of flowing back (siphoning by engine stopping and outside seawater entering through the transom exhaust hole).
- 5) In order to avoid this risk, an air ventilation unit and exhaust riser are needed. If in doubt about exhaust system installation, please contact your nearest Hyundai SeasAll dealer.

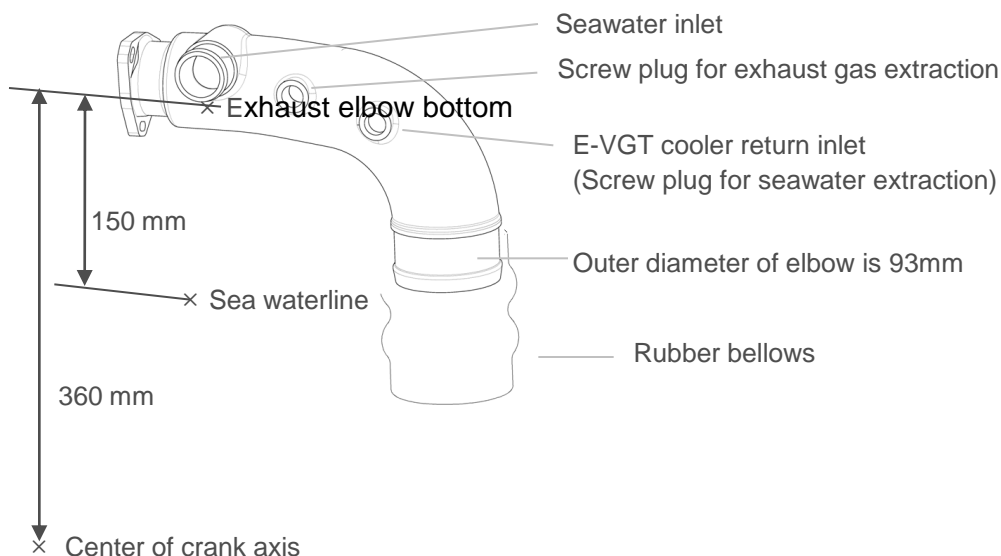

**CAUTION**  
 IF IN DOUBT ABOUT EXHAUST SYSTEM INSTALLATION, PLEASE CONTACT YOUR NEAREST HYUNDAI SEASALL DEALER.


### CHAPTER 4 FUEL SYSTEM

The fuel supply system of this engine is diesel common rail direction injection. In order to optimize engine combustion, its maximum injection pressure is up to 1600 bar. Multi-injection is possible thanks to the quick response of the piezo type injector.

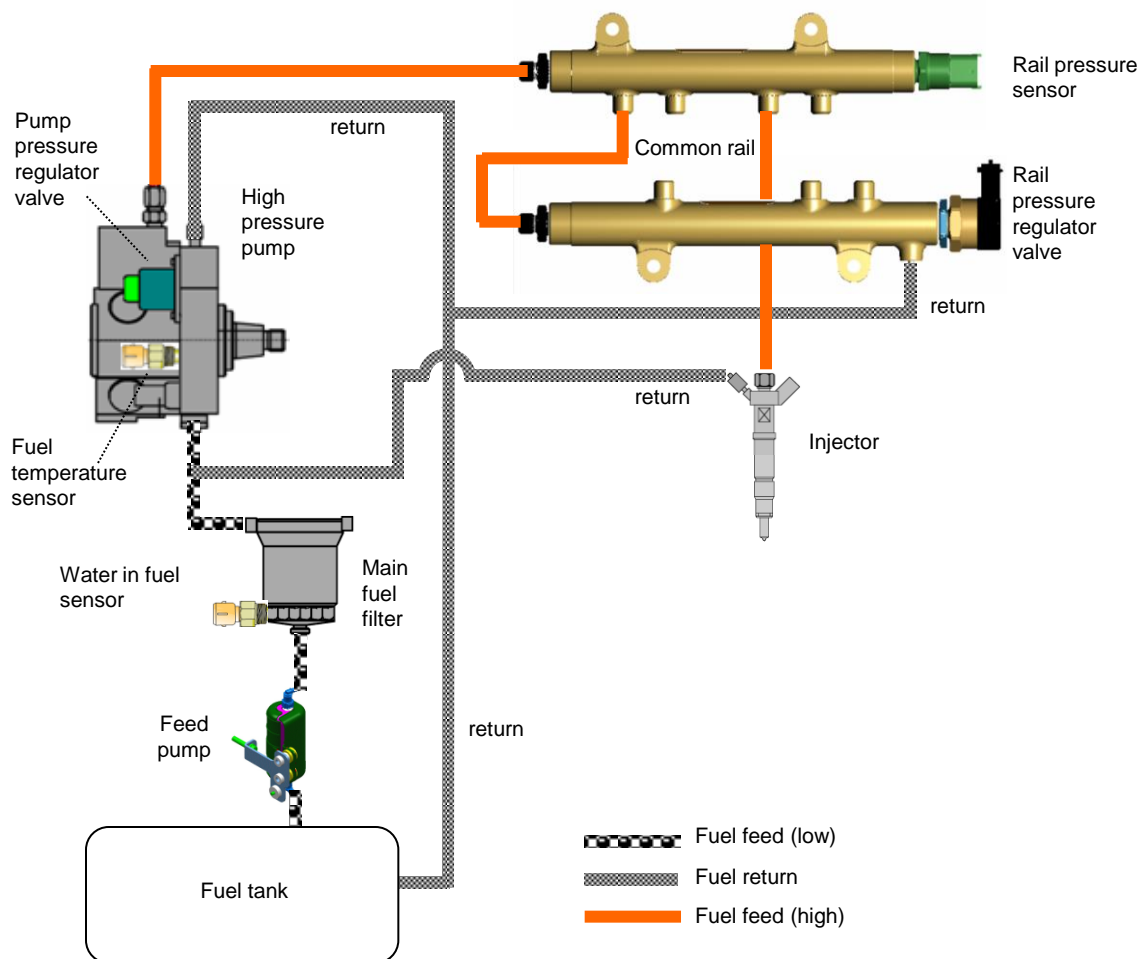






1. THE FLOW OF FUEL

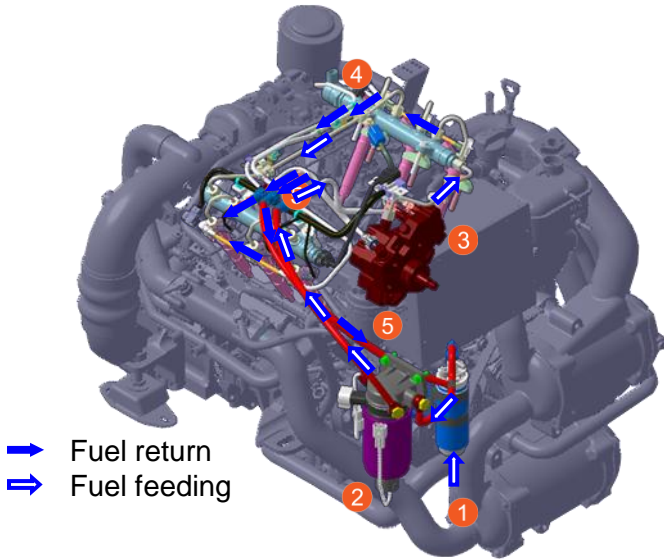

→ Fuel return  
→ Fuel feeding

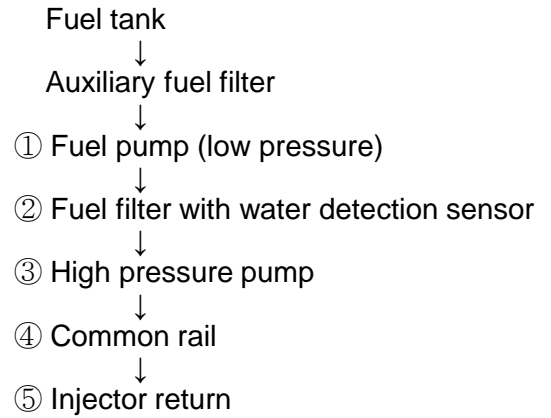


2. LOW PRESSURE FUEL LINE

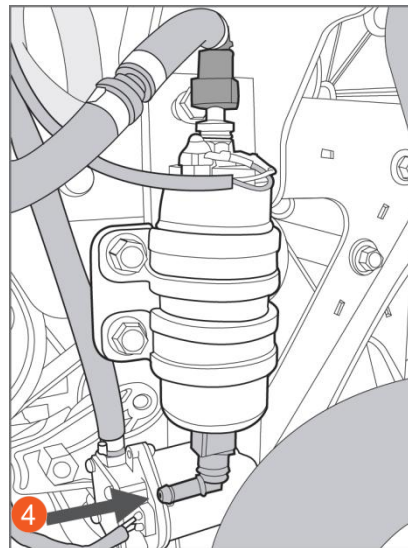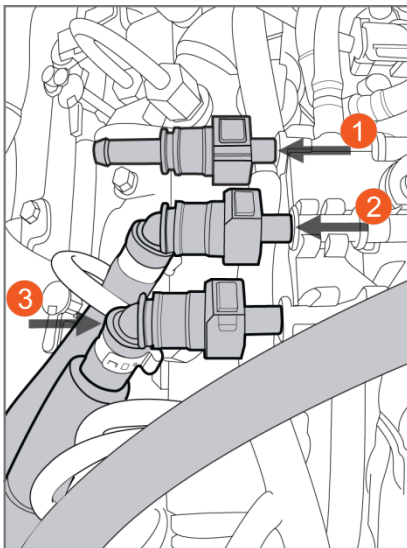

- ① Return line to fuel tank ( engine out )
- ② Return line from injector to main fuel filter ( engine out )
- ③ Feeding line from main fuel filter
- ④ Feeding line from fuel tank to electric feed pump (low pressure pump)
- ※ The internal diameter of all fuel lines must be at least 8 mm.

### 3. ACCELERATION SENSOR AND CONTROL LEVER

When installing control lever cable to acceleration sensor, be sure that the acceleration sensor lever is fully released to the idle position and fully pulled to the full-load position. The swing distance of lever between idle and full-load position is 65mm.

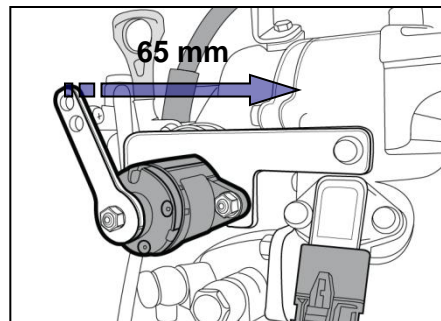



#### The procedures for control lever installation

##### 1) Idle position setting

You can make sure that the position value(%) should indicate 0% at neutral condition.

##### 2) Full load position setting

You can make sure that the position value(%) should indicate full load range(90~99.2%) adequately at fully forward lever condition. If not fulfilled, you need to disassemble and adjust the base neutral position of control lever by moving it to the rear until fulfilled.

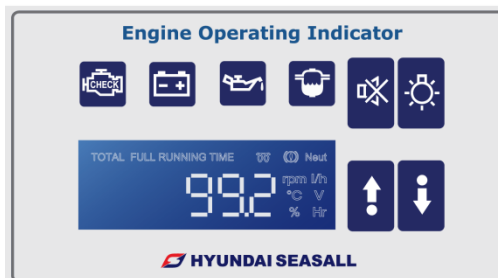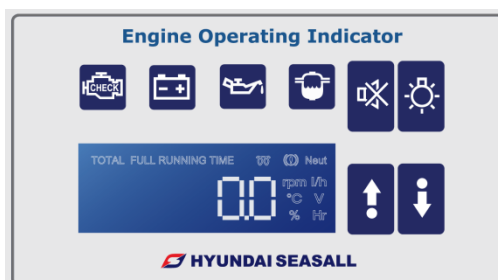

## CAUTION

**YOU SHOULD PERFORM ABOVE PROCEDURES ON CONDITION ENGINE IS NOT RUNNING BUT IGNITION KEY ON AFTER CONTROL LEVER INSTALLATION.**

#### 4. RECOMMENDED FUEL QUALITY


The following fuels should be used for engine operation:

- Standard summer / winter diesel fuel according to DIN EN 590 (classes A-F)
- Diesel fuel according to DIN EN 590 (classes 0-4) in arctic climates
- Summer diesel fuel according to California and U.S. federal regulations
- Winter diesel fuel if lubricity is comparable to diesel fuel according to DIN EN 590
- Mixture of diesel fuel with 5 Vol.% RME according to DIN 51606
- Later admixing or additional use of additives, gasoline or special fuels is not permitted

#### 5. DRAINING WATER FROM FUEL FILTER

- 1) The fuel filter for a diesel engine plays the important role of separating water from fuel and accumulating the water in its base. If water accumulates in the fuel filter, a warning light comes on when the ignition switch is in the ON position.
- 2) If the water in the fuel filter is over the limit, the Water Sensor Lamp on the EOI will light up. If this happens, you must stop the engine and drain the water in fuel filter yourself or ask the nearest workshop to do this.
- 3) Water and a little fuel will drain at the same time. Therefore, avoid flames in your workspace.
- 4) If your fuel is not well suited to your engine, more frequent drainage will be required.
- 5) To check and drain the water in fuel filter:

- Loosen the drain plug (part ①) and drain water. 100 ~ 200cc drainage is proper
- After water is drained, securely tighten the drain plug
- After starting the engine, check to make certain the fuel filter warning light is off

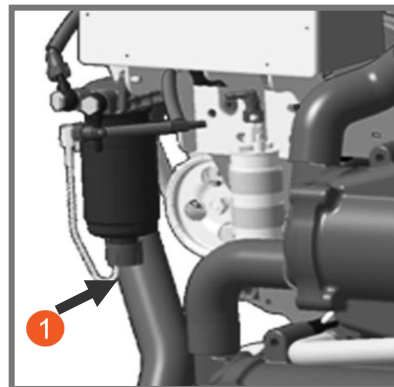


### CAUTION

HYUNDAI SEASALL'S GUARANTEES OR WARRANTIES ARE VOID IN CASES WHERE DAMAGE TO THE FUEL INJECTOR COMPONENTS (HIGH PRESSURE PUMP, INJECTORS, ETC.) CAN BE ATTRIBUTED TO THE USE OF UNQUALIFIED FUELS.

IF THE WATER ACCUMULATED IN THE FUEL FILTER IS NOT DRAINED AT PROPER TIMES, DAMAGE TO MAJOR ENGINE PARTS. WHEN REPLACING THE FUEL FILTER CARTRIDGE, USE GENUINE PARTS ONLY.

**CHAPTER 5**  
**AIR INTAKE SYSTEM**

The intake air system of this engine is optimized by EVGT and a highly efficient intercooler system. The pressure of the air system is up to about abs. 2.5 bar in order to optimize engine combustion.

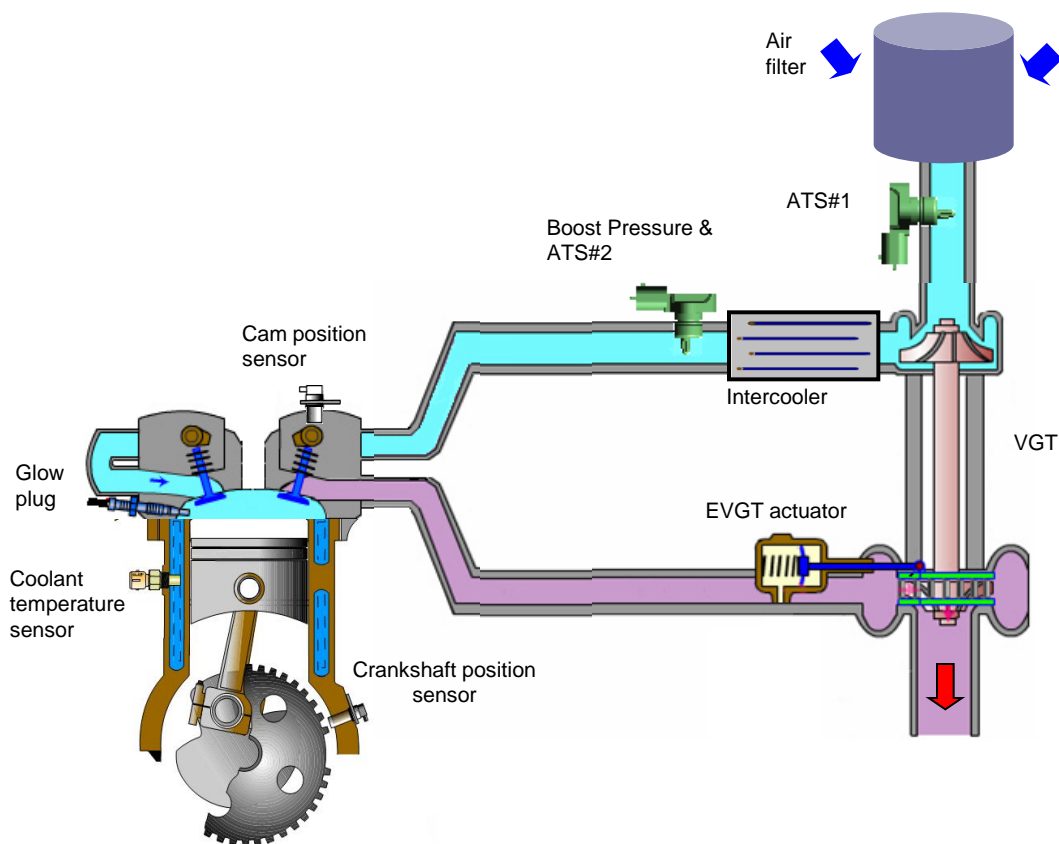


**1. ENGINE ROOM VENTILATION**

- 1) Engines with turbo-charger air inlet systems require much more cool fresh air than non-turbocharged engines.  
 (Maximum air consumption is 800kg/h, minimum engine room vent area is 50cm<sup>2</sup>.)
- 2) The cool fresh air must be pumped into the engine in order to perform at normal power and fuel consumption.
- 3) The temperature at the air inlet should be as low as possible. A high temperature of inlet air may reduce engine performance.



### 2. AIR FILTER MAINTENANCE

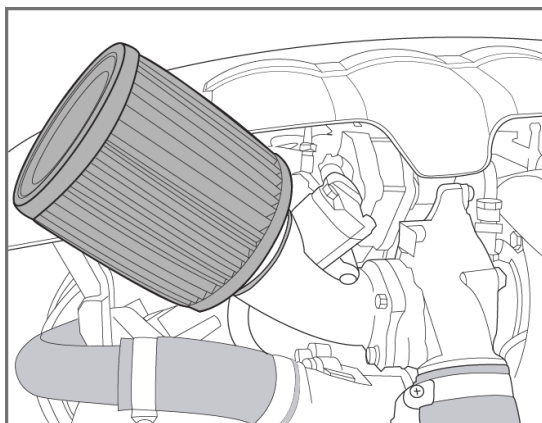

- The original Hyundai SeasAll air cleaner may be cleaned and reused.
- If the air filter is very dirty, it can increase airflow resistance and reduce flow of air to the engine. This can result in reduced power and fuel efficiency.
- Cleaning the air filter should be carry out periodically according to the procedure below.
- Do not clean the filter element with gasoline or other solvent cleaners.
- Remove the air filter from engine.
- Put the air filter on a flat surface and shake dust out.
- Liberally spray K&N Air filter Cleaner onto both sides the of filter and allow to soak for 10 minutes to loosen the dirt.
- Wash out the dust with running water of low pressure from the inside toward the outside.
- Dry the wet air filter in the shade for 2~3 hour. You can reduce drying time by blowing with a hair dryer on COLD or by blowing with low pressure compressed air.
- (CAUTION) Do not use high pressure air, high pressure water or hot air to clean and/or dry the air filter. These can damage the performance of the air filter.
- Apply air cleaner oil over the outside of the filter. If too much oil is applied, it will reduce performance.
- Reassemble air filter to engine.




### CAUTION

WHEN REMOVING THE AIR FILTER, BE CAREFUL THAT DUST OR DIRT DOES NOT ENTER THE AIR INTAKE, OR DAMAGE MAY RESULT. AND DO NOT RUN WITHOUT AIR CLEANER. THIS COULD RESULT IN EXCESSIVE ENGINE WEAR.  
USE OF NON-GENUINE PARTS COULD DAMAGE THE TURBO CHARGER OR ENGINE.

### CHAPTER 6 LUBRICATION SYSTEM


#### 1. ENGINE OIL FLOW

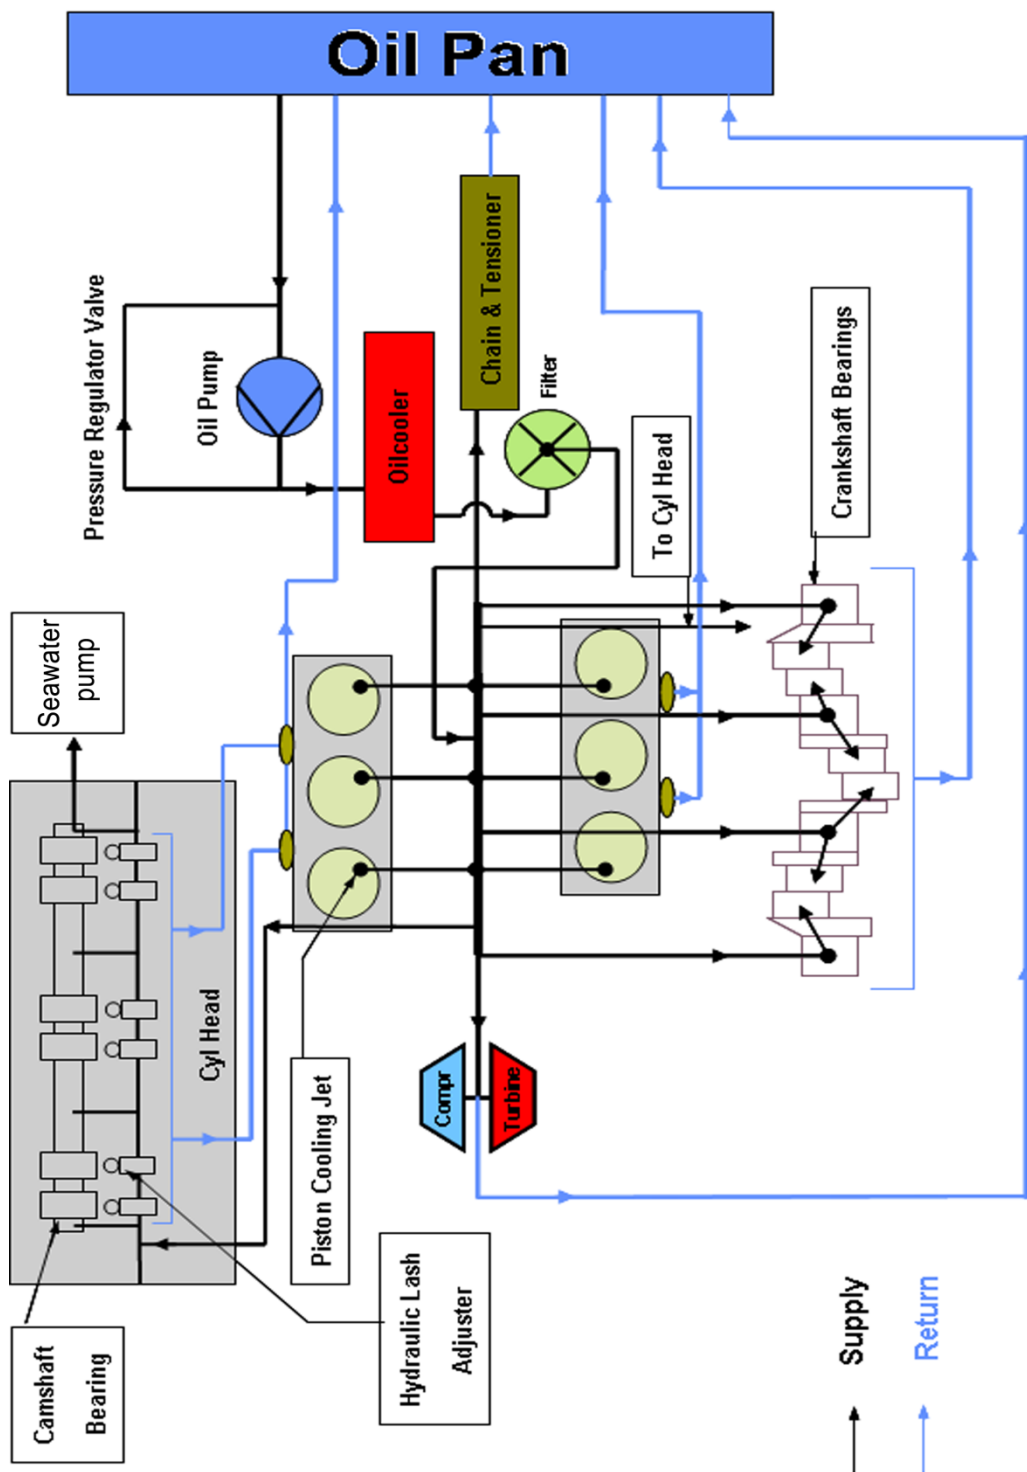

## 2. ENGINE OIL LEVEL CHECKS

The engine oil level must be checked at regular intervals.

- Be sure the boat is level.
- Start the engine and allow it to reach normal operating temperature.
- Turn the engine off and wait about 5 minutes, until the oil has returned to the oil pan.
- Pull the dipstick out, wipe it clean, and re-insert it fully.
- Pull the dipstick out again and check the level. The level should be between F and L. If it is near or at L, add enough oil to bring the level to F. Do not fill with engine oil above the F mark.

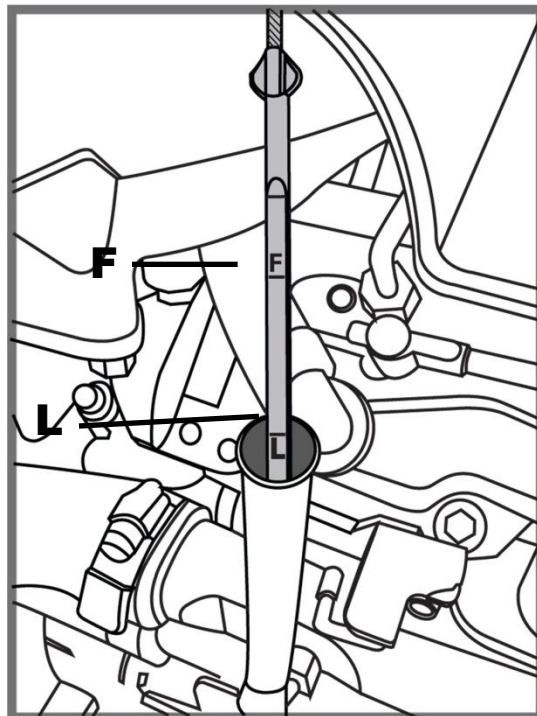

## 3. RECOMMENDED OIL QUALITY



For best performance and maximum protection during all types of operation, select only those lubricants which :

- 1) Satisfy the requirement of the API or ACEA classification.
- 2) Have proper SAE grade number for expected ambient temperature range.

Description		Specifications	Limit
Oil quality	ACEA	Above B4	Service oil quality should conform to ACEA or API classification.
	API	Above CH - 4	
	SAE	15W-40	-15°C above
		10W-30	-20°C ~ 40°C
		5W-30	-25°C ~ 40°C
	0W-30	10°C below	




#### 4. ENGINE OIL EXTRACTION PUMP

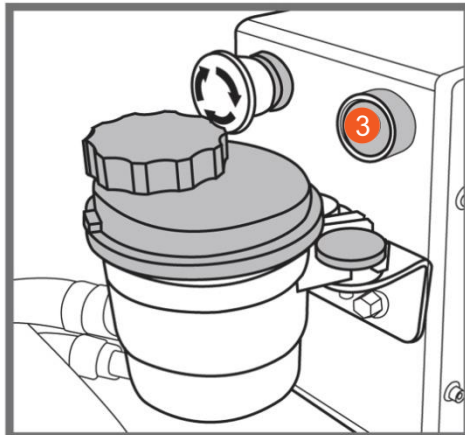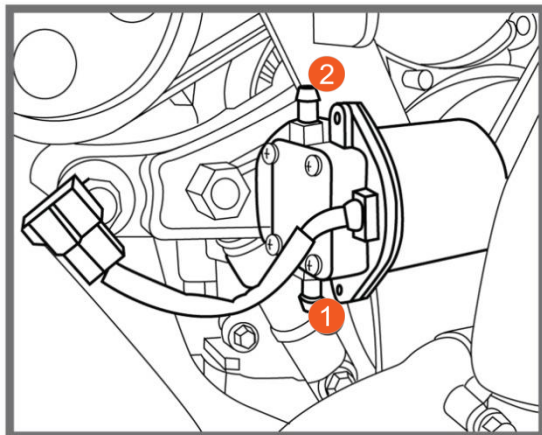

- 1) Allow the engine to warm up at least 5 minutes.
- 2) Remove the engine oil inlet cap and oil filter.
- 3) The oil drain hose is connected to the oil extraction pump ①, route the loose end of the hose into the container being used for the oil change②.
- 4) Turn the ignition key ON (but do NOT start the engine) then press and hold button ③ on the left side of the ECU box with the ignition switched on until the engine oil (about 7.2liters) is completely pumped out.

#### 5. OIL FILTER REPLACEMENT

- 1) Remove the oil filter cap by using a 36mm wrench; loosen the oil filter cap slowly. Be careful not to drop engine oil while the oil filter paper is removed with its cap.
- 2) Remove the oil filter element (A) and its O-ring (B) from its cap.
- 3) Replace the filter element assembly and O-ring with the new ones that are supplied as a service kit. Do not reuse the removed O-ring.
- 4) Assemble the oil filter cap with the filter fixed. The tightening torque is 24.5Nm (2.5kgf·m, 18.1lb-ft).

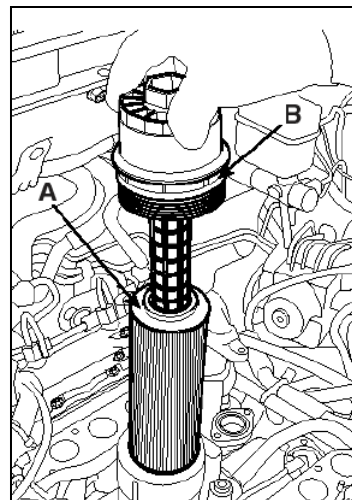

### WARNING

USED OIL MUST BE STORED IN A SAFE PLACE AWAY FROM CHILDREN AND FIRE PLACE UNTIL ITS PROPER DISPOSAL. IF YOU HAVE DISPOSAL PROBLEM, PLEASE CARRIED OUT ENGINE OIL CHANGE BY A NEAREST HYUNDAI SEASALL SERVICE NETWORKS.

CHAPTER 7  
ELECTRICAL SYSTEM



1. BATTERY CABLE CONNECTIONS

- 1) The size of battery cable should be at least 40mm<sup>2</sup> and no longer than 4m.
- 2) If the cable is longer than 4m. the size should be at least 50mm<sup>2</sup>
- 3) Recommended battery capacity is over 200 amperes.
- 4) Connect the battery (+) cable from the battery to the start motor with the cable from alternator (+) cable.
- 5) Connect the battery (-) cable and system ground connector to alternator housing or Engine block.

\*In case of 'Two Pole System' :

You must connect battery (-) cable to alternator housing.

- 6) Battery cables connectors should be clean and tightly fastened.

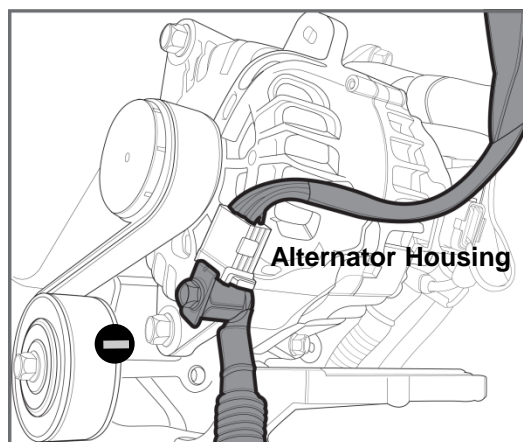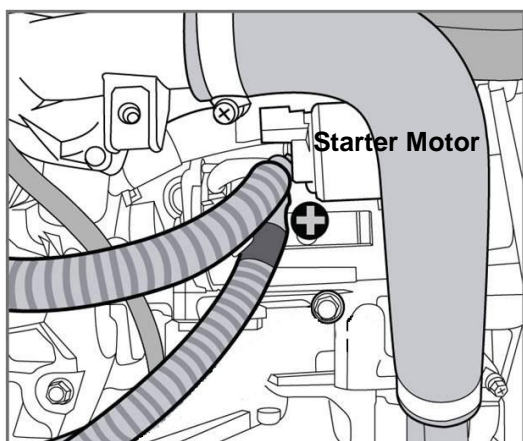

**CAUTION**

DO NOT TOUCH OR REMOVE ELECTRICAL PART WHEN STARTING OR DURING OPERATION.  
KEEP HAND, HAIR, AND CLOTHES AWAY FROM THE FLYWHEEL AND OTHER ROTATING PARTS WHILE THE ENGINE IS RUNNING.

**2. BATTERY CHECKS**

Battery inspection is very important in electronic control engines: You must check the battery condition regularly.

**LOAD TEST**

- 1) Perform the following steps to complete the load test procedure for maintenance-free batteries.
- 2) Connect the load tester clamps to the terminals and proceed with the test as follows:
  - a. If the battery has been charged, remove the surface charge by connecting a 300 ampere load for 15 seconds.
  - b. Connect the voltmeter and apply the specified load.
  - c. Read the voltage after the load has been applied for 15 seconds.
  - d. Disconnect the load.
  - e. Compare the voltage reading with the minimum and replace the battery if battery test voltage is below that shown in the voltage table. If the voltage is greater than shown in the table, the battery is good. If the voltage is less than shown in the table, replace the battery.

Voltage	Temperature
9.6	20°C (70°F) and above
9.5	16°C (60°F)
9.4	10°C (50°F)
9.3	4°C (40°F)
9.1	-1°C (30°F)
8.9	-7°C (20°F)
8.7	-12°C (10°F)
8.5	-18°C (0°F)



**WARNING**  
 BATTERY MUST BE STORED AND TREATED IN A SAFE PLACE AWAY FROM CHILDREN AND FIRE PLACE. FLUID IN THE BATTERY IS A CORROSIVE ACID AND MUST BE HANDLED WITH CARE. IF SPILLED ON ANY PART OF BODY, FLUSH IMMEDIATELY WITH WATER.



**CAUTION**  
 DO NOT LOOSEN OR DETACH BATTERY TERMINALS WHILE ENGINE IS RUNNING. DOING SO WILL DAMAGE CHARGING SYSTEM AND OTHER ELECTRONIC DEVICES.

### 3. FUSE AND RELAY

#### 3.1 FUSE

An engine's electrical system is protected from electrical overload damage by fuses.


If a fuse has blown, the element inside the fuse will be melted. If the electrical system does not work, first check the fuses in ECU box. Always replace a blown fuse with one of the same rating.



If the replacement fuse blows, this indicates an electrical problem. Avoid using the system involved and immediately consult an authorized Hyundai SeasAll dealer.

#### Fuses in the ECU Box


- 1) System Power: 30Amp
- 2) Ignition Power: 5Amp
- 3) ECM(ECU) Power: 20Amp
- 4) Main Relay Power: 15Amp
- 5) Spare: 30Amp
- 6) Fuel Filter: 30Amp

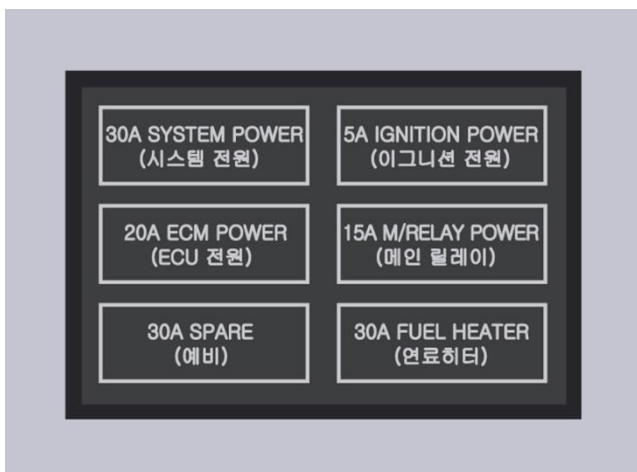

### 3.2 RELAYS

#### Relays in the ECU Box



- 1) Main Relay: 30 Amp
- 2) Oil Extraction Pump Relay: 30 Amp
- 3) Fuel Pump Relay : 30 Amp
- 4) Spare : 30 Amp
  - \* Two Pole System : Cut-off solenoid relay (30 Amp)
- 5) Start Solenoid Relay: 30 Amp
- 6) Fuel Heater Relay: 30 Amp

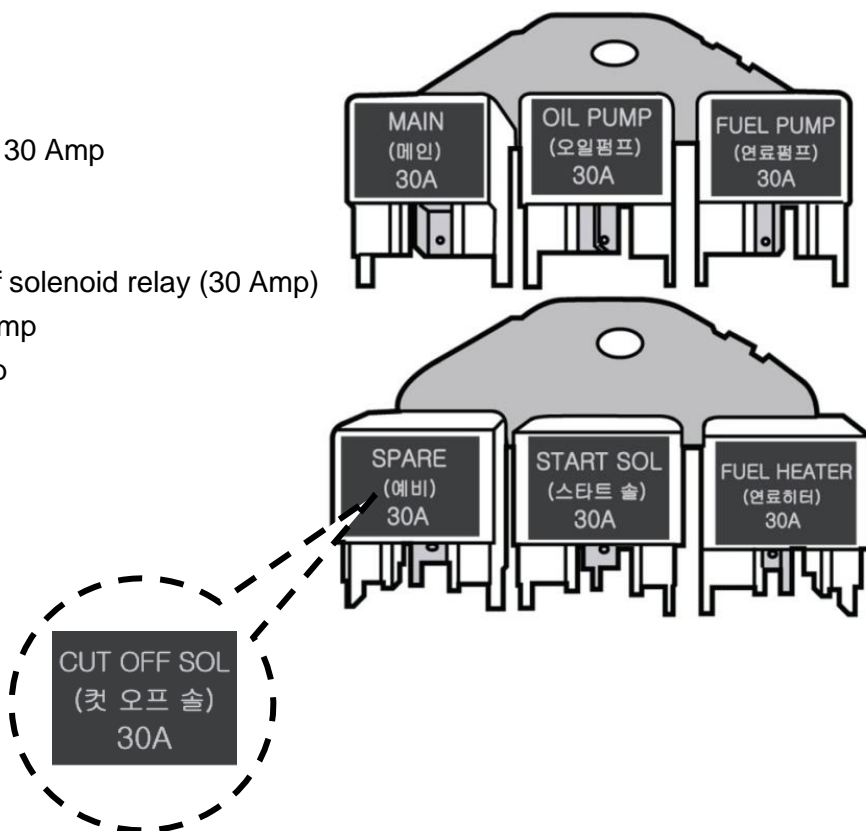

- Using an ohmmeter, check that there is continuity between each terminal.

Terminal	Continuity
30 - 87	NO
85 - 86	YES


- Check for continuity between terminals 30 and 87.
- Always replace a damaged relay with one of the same rating.

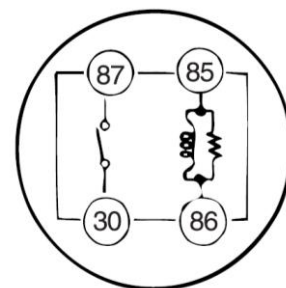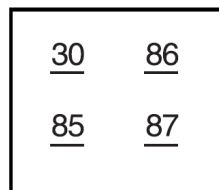



### CHAPTER 8 INSTRUMENT SYSTEM


#### 1. INSTRUMENT CONNECTIONS

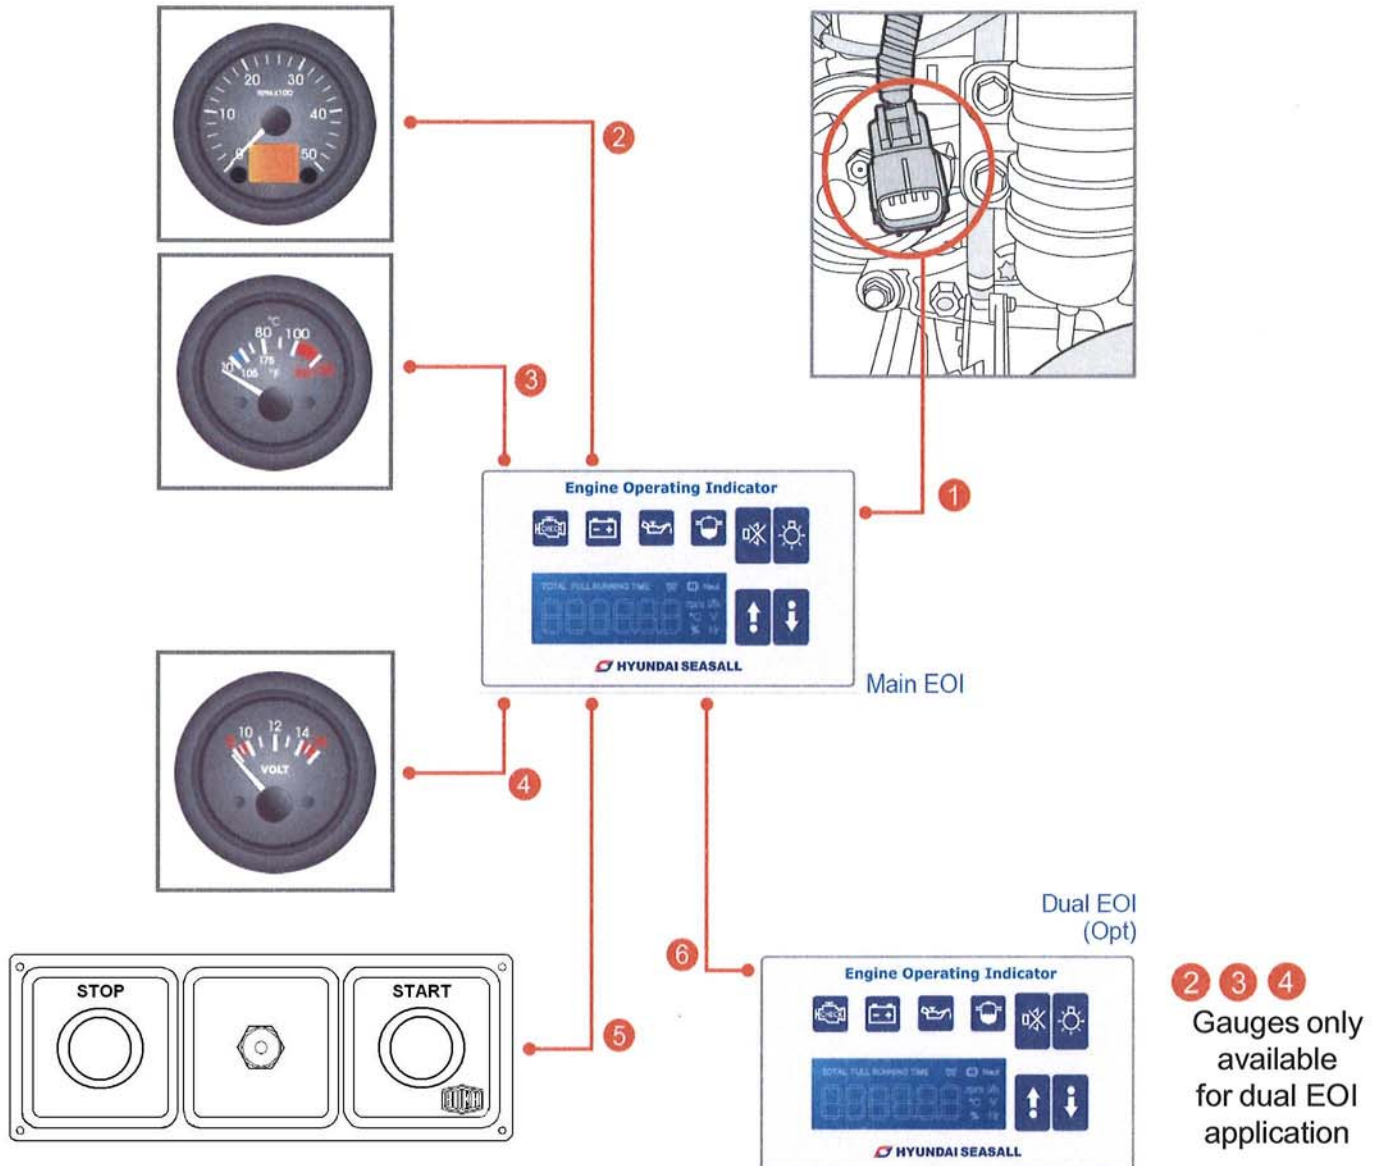


- ① Engine to EOI wiring (standard: 7m, option: 10m)
- ② EOI to RPM gauge(Ø 85) wiring
- ③ EOI to coolant temp gauge(Ø 52) wiring
- ④ EOI to volt gauge(Ø 52) wiring
- ⑤ EOI to ignition key switch(Ø 21.4) wiring
- ⑥ Dual EOI wiring (option for dual stage)


※ For information about the installation and operation of the EOI (Engine Operating Indicator) system, please refer to Chapter 9.

**Standard instrumentation**

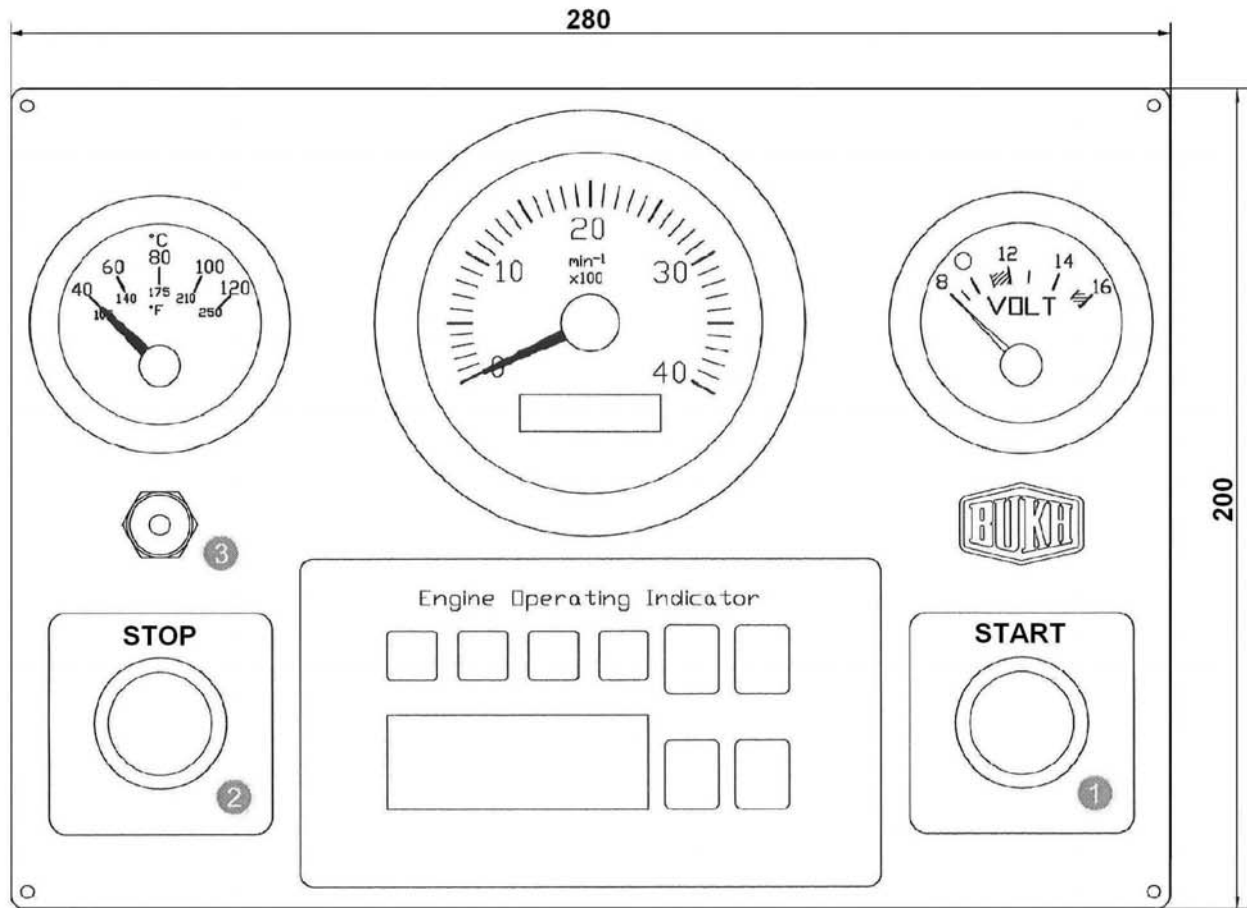

① Start button    ② Stop button    ③ Emergency stop

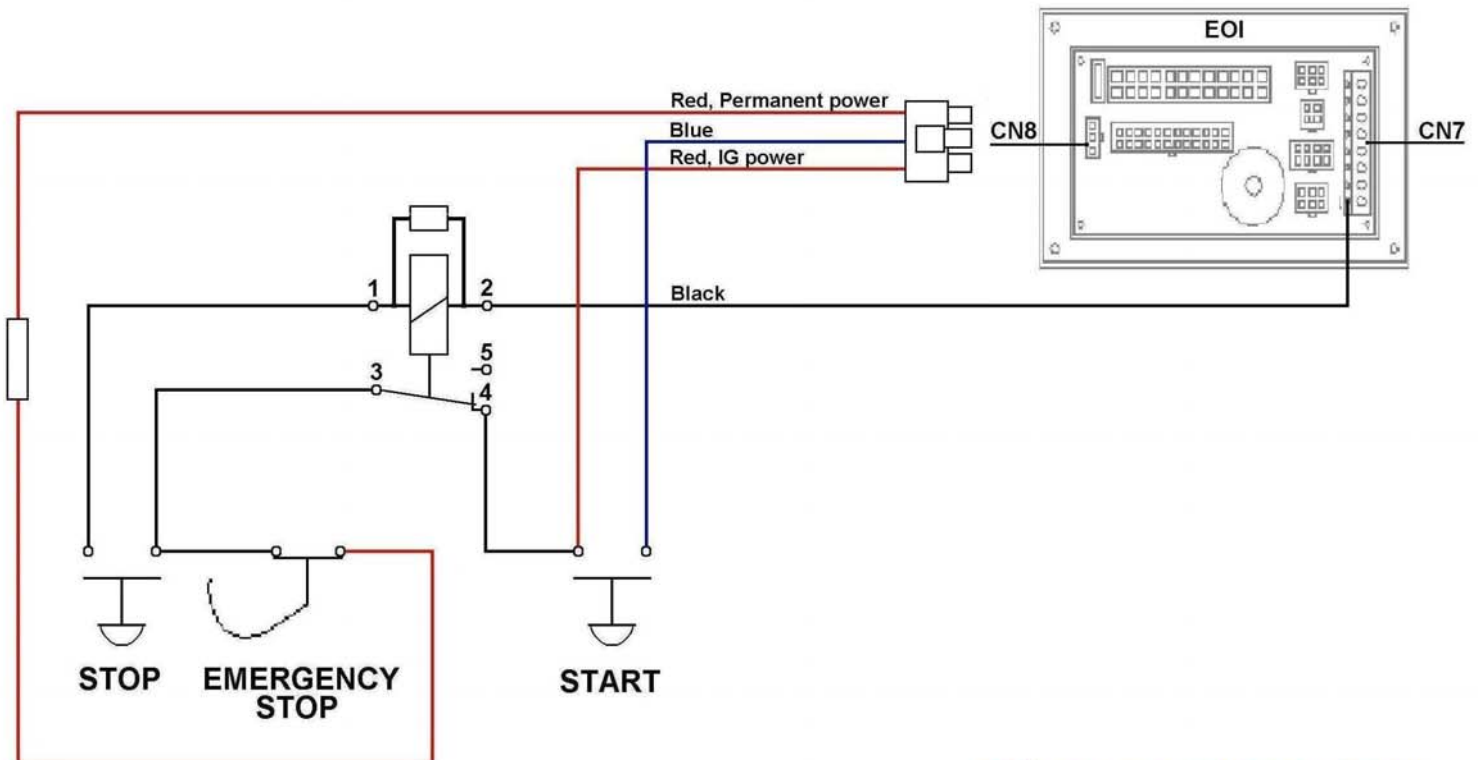


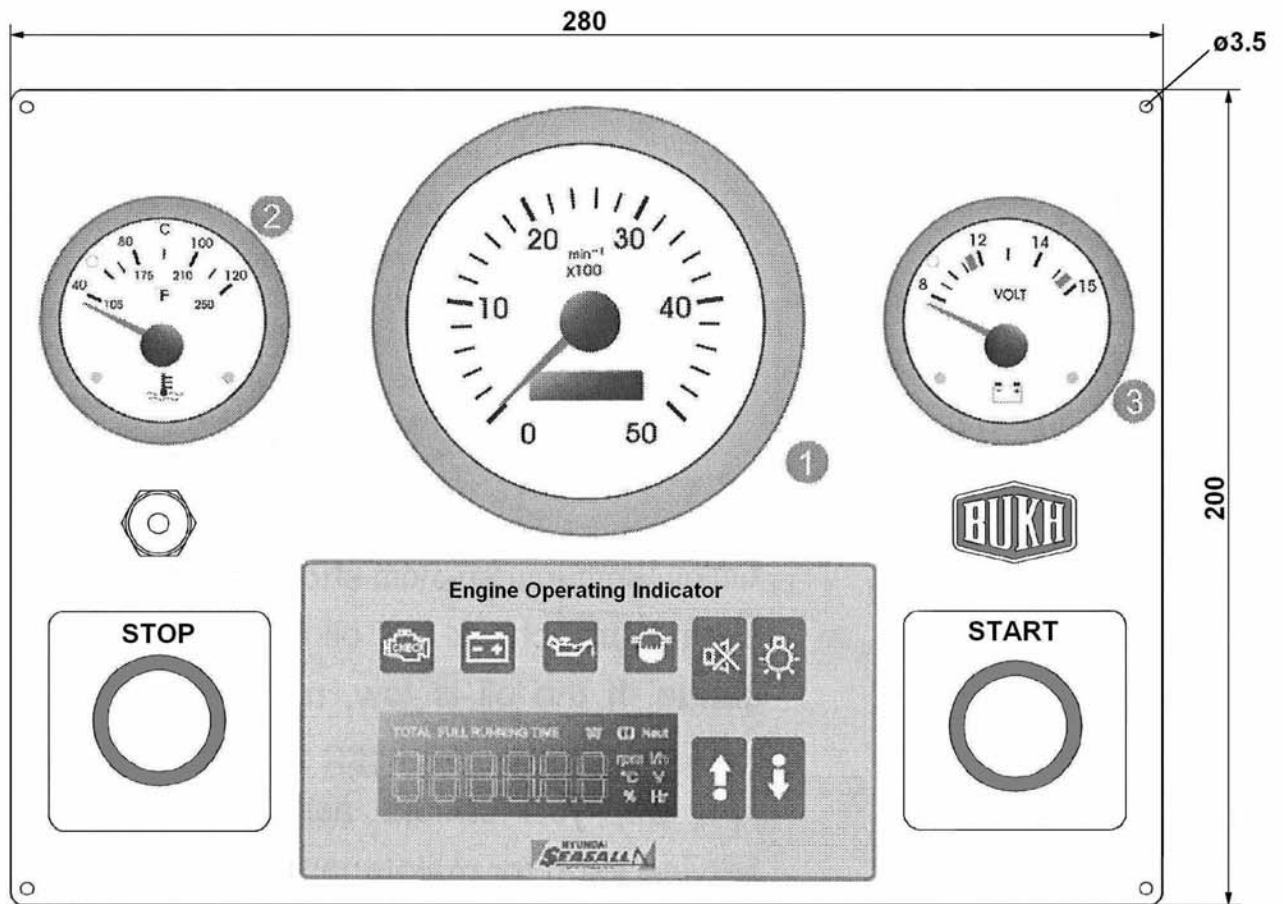

① RPM Gauge    ② Coolant Temperature Gauge    ③ Battery Volt Meter Gauge


### COOLANT TEMPERATURE GAUGE

- When power is ON, this gauge will work.
- Avoid max. rpm and WOT (Wide Open Throttle) before a cold engine is fully warmed up, as it can harm the engine.
- The gauge needle should be in proper range. If the outside temperature is high, the gauge needle may sit at a higher range. As long as the alarm doesn't sound, the engine is normal.
- If the gauge blinks and an alarm sounds in the EOI, check the coolant temperature and level. If the coolant is low, refill it.
- If the temperature of the engine coolant is higher than 105°C, the engine power will decrease. You should check the engine cooling system.

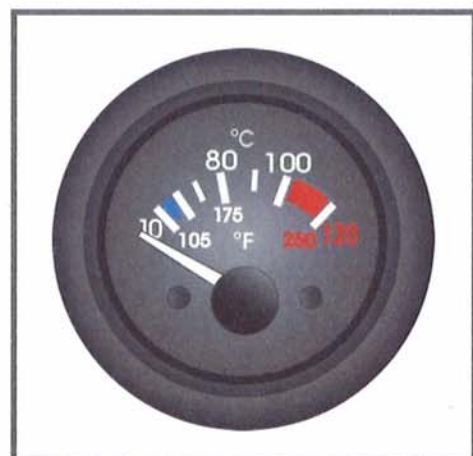


**1.3 RPM GAUGE**

- 1) When the power is ON position, this gauge will work.
- 2) This gauge indicates real-time engine rpm.
- 3) Avoid max. rpm and WOT (Wide Open Throttle) before a cold engine is fully warmed up, as it can harm the engine.

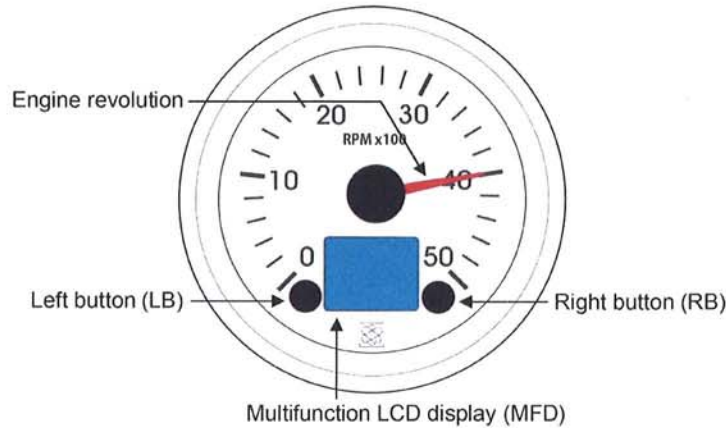


**USER INTERFACE**

- When press the LB/RB button, the below information change the next information progressively.
- If there is a problem in the engine, the multifunction LDC display(MFD) show the related symbol and alarm.

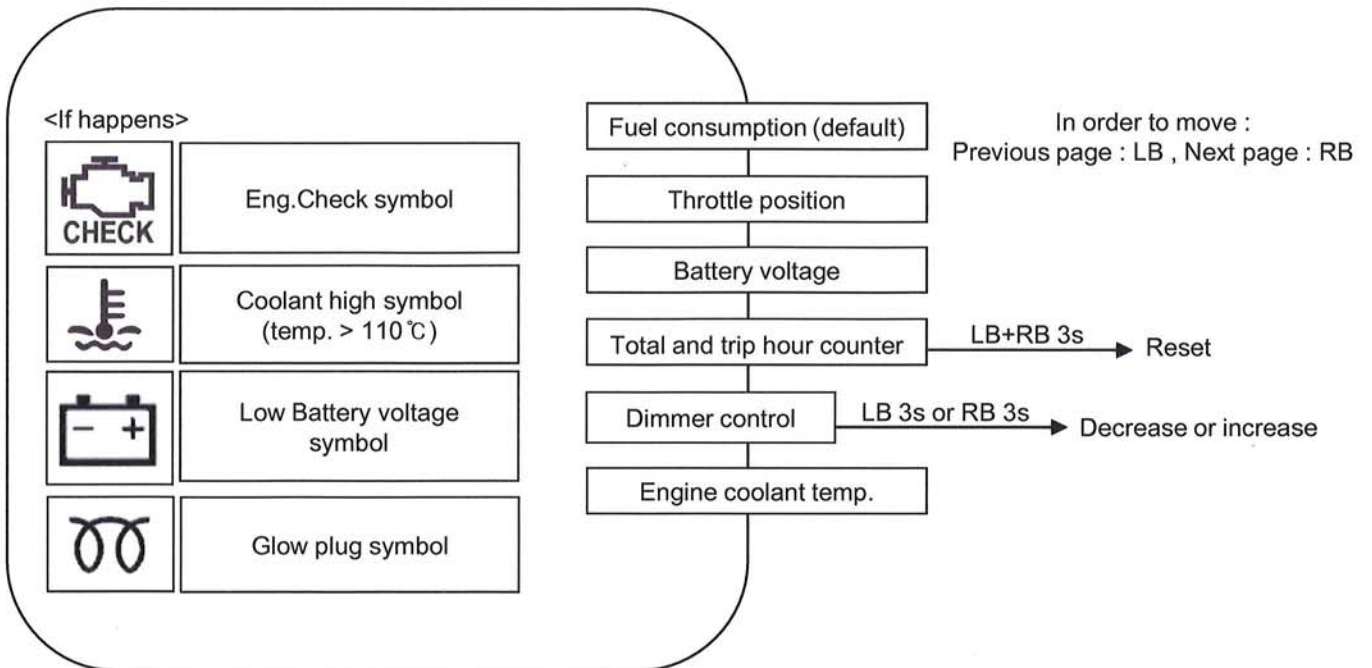

#### 1.4 BATTERY VOLT METER GAUGE

- This gauge will work when the power is "ON"
- This gauge indicates real-time battery voltage.
- If battery voltage is not sufficient, the engine can not be started.
- For a working engine, 12 ~ 16V volts is normal. If the battery voltage is under 12V, you should check battery and alternator.
- At the moment of engine ignition, the voltmeter needle may momentarily drop to 8V. This is normal.

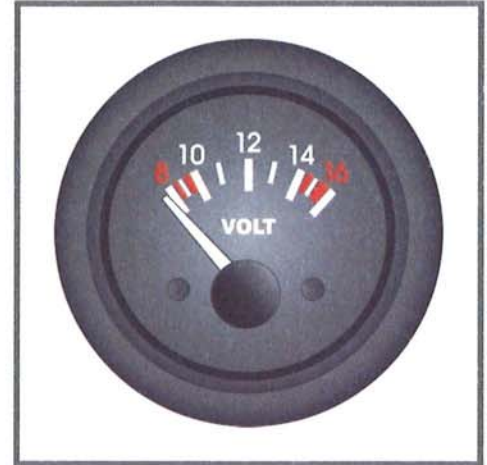

#### 2. CUT-OUT FOR GAUGE

- RPM Gauge : Ø 86 mm
- Coolant Temperature Gauge : Ø 53 mm
- Battery Volt Meter Gauge : Ø 53 mm


#### 3. CUT-OUT FOR EOI SYSTEM

- You can use the installation template enclosed with EOI for a cut-out.


### CHAPTER 9 EOI SYSTEM



The Engine Operating Indicator (EOI) system gives you a lot of information about the engine's current status. You can hear alarm beeps, or see information including RPM, coolant temperature, warning lamps, error codes and engine working time. If the switch is on, warning lamps for battery, engine oil and so on will flash. When the engine starts normally, the lamps all go off. If there is a problem, the specific lamp will come on. You should contact your nearest Hyundai SeasAll dealer and have the engine checked as soon as possible.

#### 1. OVERVIEW OF EOI SYSTEM

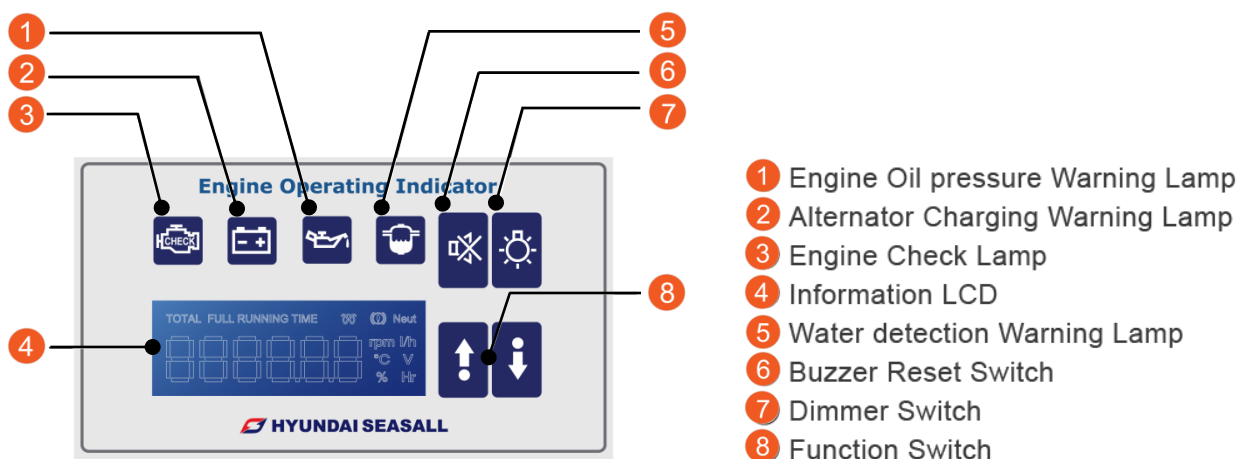

#### 1.1 INFORMATION LCD ITEM

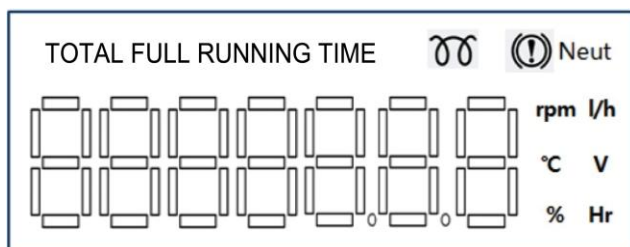

- |                                |  |
|--------------------------------|--|
| 1) Engine rpm (RPM)            | 6) Running Time (Hr)   |
| 2) Engine Coolant Temp. (°C)   | 7) Total WOT Running Time (Hr)   |
| 3) Throttle Lever Position (%) | 8) Glow Plug Indicator lamp       |
| 4) Fuel Consumption (l/h)      | 9) Neutral Lever Alarm lamp  Neut |
| 5) Battery Voltage (V)         | 10) DTC (Diagnosis Trouble Code)   |

## 1.2 SWITCHES

- Buzzer Reset Switch - This switch is used for turning off the alarm temporarily.
- Dimmer Switch - This switch is used for controlling brightness of the other gauges connected to the EOI.
- Function Switch - This switch is used for changing the information display on the LCD.

## 1.3 ALARM LAMPS

Alarm may sound when alarm lamps flicker.

### CHECK ENGINE LAMP



- This lamp informs you that the engine has a serious problem.
- You can see the DTC on the LCD of the EOI.
- It may be possible to drive at limited rpm. The ECU will control the functions to protect the engine. You should immediately have the engine checked at the nearest service shop.

### ENGINE OIL LAMP



- This lamp informs you of the engine oil pressure low.
- If this lamp is on, you should stop the engine and check the oil level with oil gauge. If the oil is low, refill it. If you refill the oil and the lamp still does not turn off, you should ask your local service shop for maintenance.

### ALTERNATOR LAMP




- This lamp informs you to recharge your battery.
- If this lamp is turned on, you should stop the engine and eliminate electric load, as well as check the alternator, alternator drive belt and wiring system.

### WATER SENSOR LAMP



- This lamp informs you to extract water from fuel filter.
- If the lamp is on, you should stop the engine immediately and drain the water in the fuel filter.
- It is recommended to check and drain the water in the fuel filter at regular periods before the lamp turns on.
- It can be harmful to drive your engine with this lamp on.

**2. EOI CONNECTIONS**

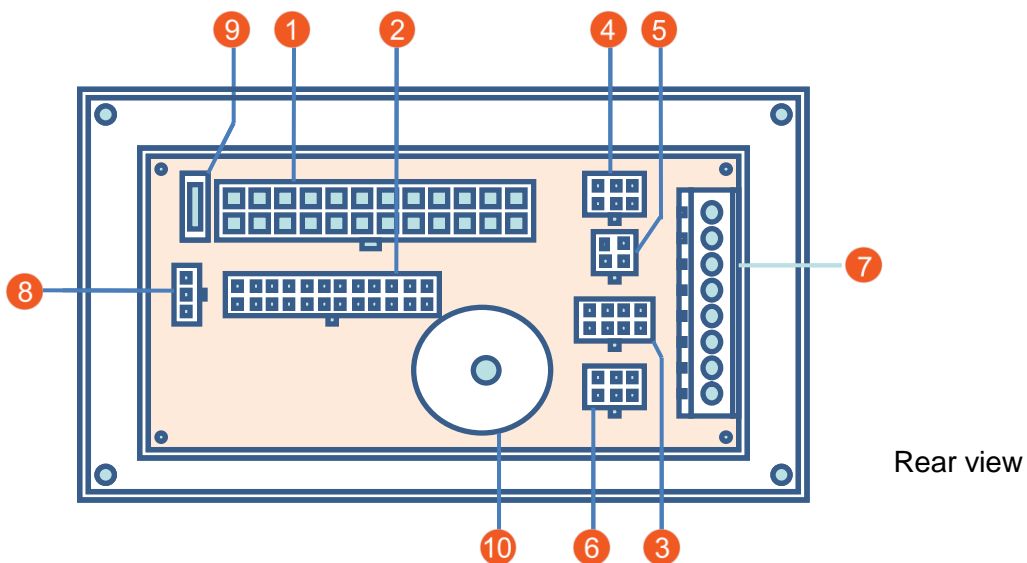

- |  |   |
|--|---|
| 1. Connection plug – CN1 (from engine)         | 6. Connection plug – CN6 (service tool) |
| 2. Connection plug – CN2 (to dual EOI)         | 7. Connection plug – CN7 (external)     |
| 3. Connection plug – CN3 (tachometer)          | 8. Connection plug – CN8 (key box)      |
| 4. Connection plug – CN4 (coolant temp. gauge) | 9. System power fuse (3 amp)            |
| 5. Connection plug – CN5 (volt gauge)          | 10. Buzzer                              |

※ It can be connected to the CN6 of EOI box as well as G-scan connector in the ECU box.



**WARNING**

LISTEN FOR A CLICK WHEN FASTENING CONNECTORS. THIS SOUND INDICATES THAT THEY ARE SECURELY LOCKED




**CAUTION**

DON'T CONNECT EXTRA INSTRUMENTS WHICH DRAW MORE THAN 1 AMPERE. THE E.O.I WILL BE OVERLOADED AND DAMAGED




### 3. EOI PIN ASSIGNMENT

#### CN1 (MAIN EOI CONNECTOR FROM ENGINE)

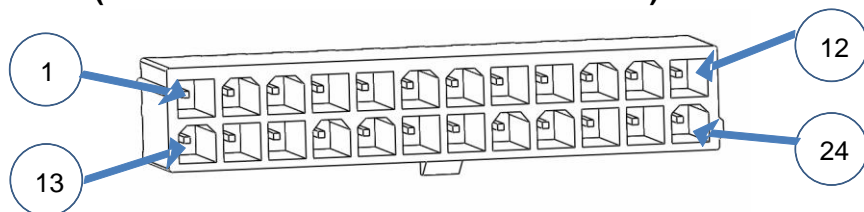

- |                               |                     |
|-------------------------------|---------------------|
| 1. Ignition power             | 13. RPM signal      |
| 2. Main relay power           | 14. Spare           |
| 3. Permanent power            | 15. Spare           |
| 4. Not used                   | 16. Spare           |
| 5. Not used                   | 17. Neutral signal  |
| 6. Coolant temperature signal | 18. K line          |
| 7. Not used                   | 19. CAN_L           |
| 8. Check lamp                 | 20. Changing signal |
| 9. Oil pressure signal        | 21. CAN_H           |
| 10. Ground                    | 22. Not used        |
| 11. Not used                  | 23. Ground          |
| 12. Water detection signal    | 24. Not used        |

#### CN2 (DUAL EOI CONNECTOR)

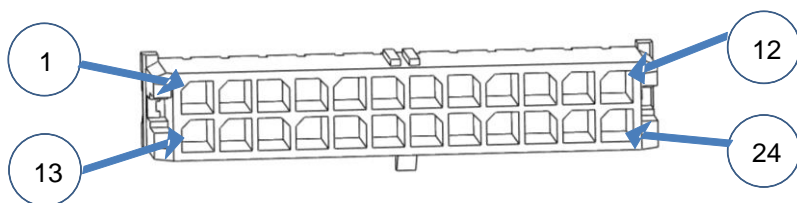

- |                            |                     |
|----------------------------|---------------------|
| 1. Ignition power          | 13. RPM signal      |
| 2. Main relay power        | 14. Spare           |
| 3. Permanent power         | 15. Spare           |
| 4. Not used                | 16. Spare           |
| 5. Not used                | 17. Neutral signal  |
| 6. Not used                | 18. K line          |
| 7. Not used                | 19. CAN_L           |
| 8. Check lamp              | 20. Changing signal |
| 9. Oil pressure signal     | 21. CAN_H           |
| 10. Ground                 | 22. Not used        |
| 11. Not used               | 23. Ground          |
| 12. Water detection signal | 24. Not used        |




# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL


### CN3 (TACHOMETER)

1. Main relay power
2. RPM signal
3. Ground
4. illumination
5. illumination
6. CAN\_H
7. CAN\_L
8. Not used

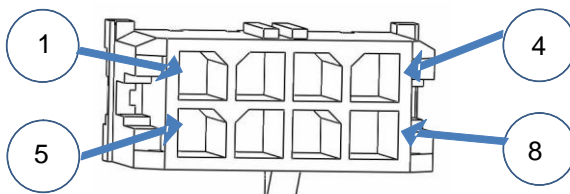


### CN4 (COOLANT TEMP. GAUGE)

1. Coolant temperature signal
2. Ignition power
3. Ground
4. illumination
5. illumination
6. Not used

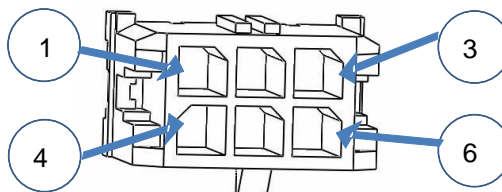


### CN5 (VOLTMETER)

1. Ignition power
2. Ground
3. illumination
4. illumination

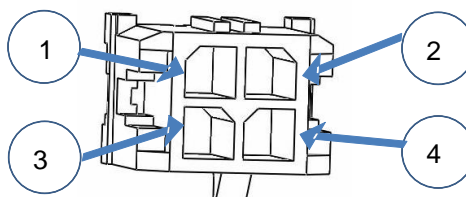


### CN6 (SERVICE TOOL)

1. CAN\_H
2. CAN\_L
3. K\_line
4. Ground
5. Main relay power
6. Not used

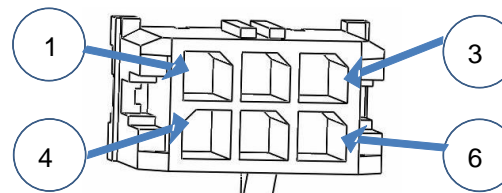


### CN7 (EXTERNAL)

1. Ground
2. Permanent power
3. Ignition power
4. Neutral switch
5. Neutral switch
6. Charging signal
7. RPM signal
8. Dimmer

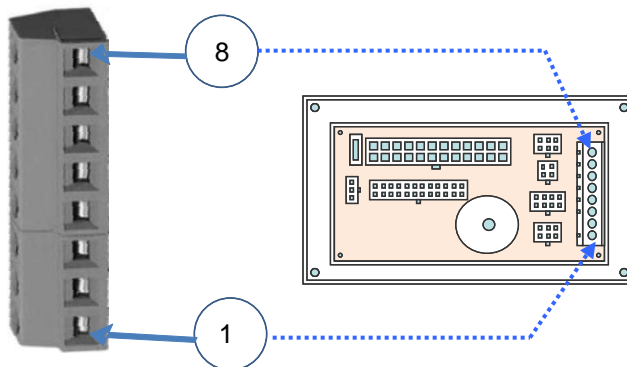

**CN8 (Start/Stop panel)**


1. Ignition power
2. Start power
3. Permanent power

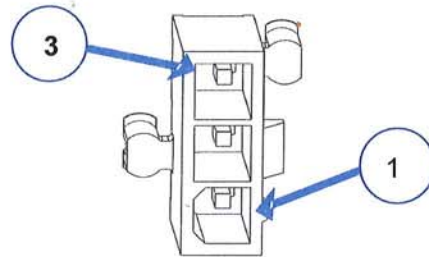


**4. NEUTRAL SWITCH AND DUAL EOI CONNECTION**

1) Neutral switch wires should be connected at pin #4 and #5 of the external connector of the EOI. If there is no neutral switch, jumper #4 and #5 with short wiring.

**SYSTEM WITH A NEUTRAL SWITCH**

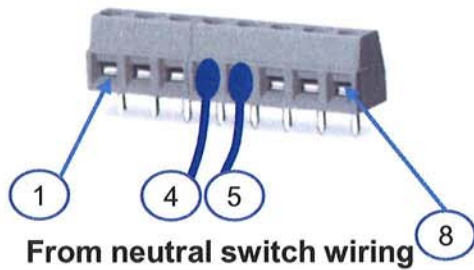


**SYSTEM WITH NO NEUTRAL SWITCH**

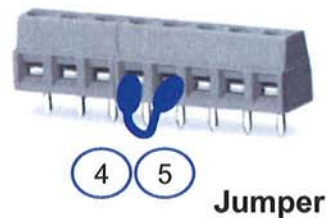


2) If there is a dual EOI, you should connect the wiring between #5 (external connector of the main EOI) and #5 (external connector of the dual EOI)

**Main EOI external connector**

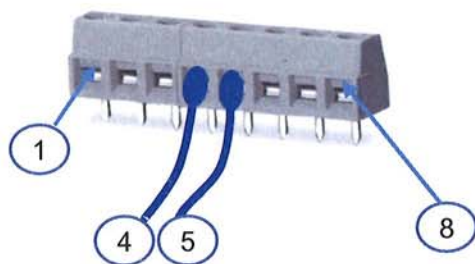

**Dual EOI external connector**

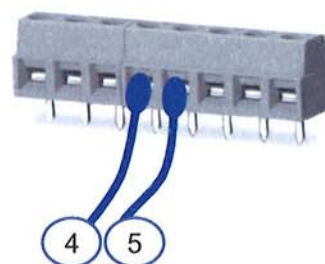


From neutral switch wiring



**CAUTION**

ENGINE WOULD NOT CRANK AND START FOR USER'S SAFETY IF GEAR POSITION IS NOT NEUTRAL OR NOT CONNECTED TO EOI EXTERNAL CONNECTION.

**5. TRIM WIRING CONNECTION DIAGRAM**

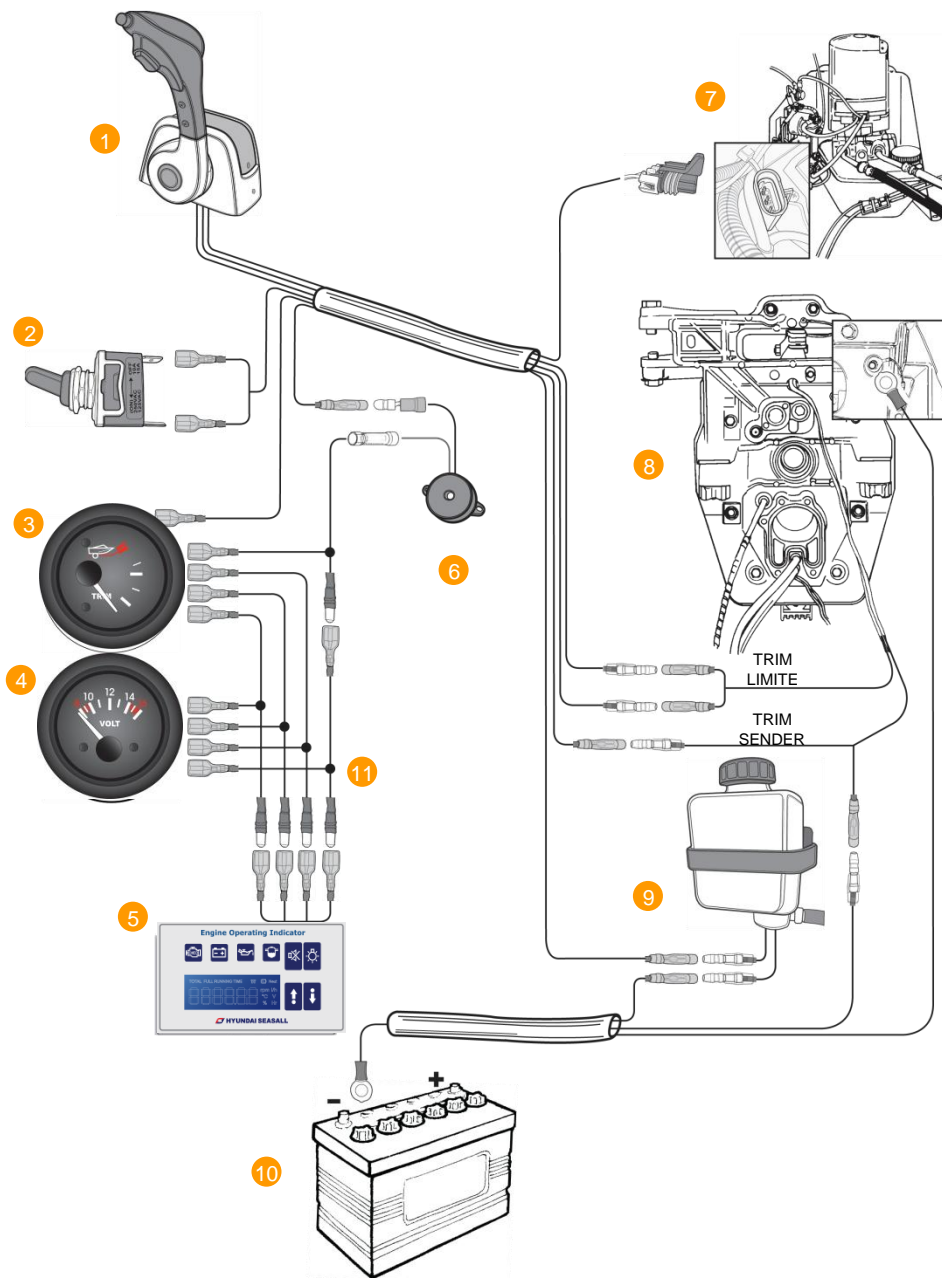

- |                                      |                              |
|--------------------------------------|------------------------------|
| <b>1</b> REMOTE CONTROL              | <b>7</b> TRIM PUMP           |
| <b>2</b> TRAILER SW (SIDE TYPE ONLY) | <b>8</b> TRANSOM PLATE       |
| <b>3</b> GAUGE-TRIM                  | <b>9</b> GEAR LUBE MONITOR   |
| <b>4</b> GAUGE-VOLT                  | <b>10</b> BATTERY            |
| <b>5</b> E O I                       | <b>11</b> GAUGE & LAMP POWER |
| <b>6</b> BUZZER (DRIVE OIL)          |                              |

### 6. G-SCAN


G-scan is diagnosis tool have function the DTC analysis, fault code searching, data analysis and ECU upgrade.



#### 6-1. G-SCAN CONNECTIONS

G-scan can be connected to the CN6 connector of EOI, as well as G-scan connector in the ECU box. For information about the CN6 of EOI, please refer to Chapter 9.

※ When connected to G-scan you can not confirm the information of the engine through the EOI.

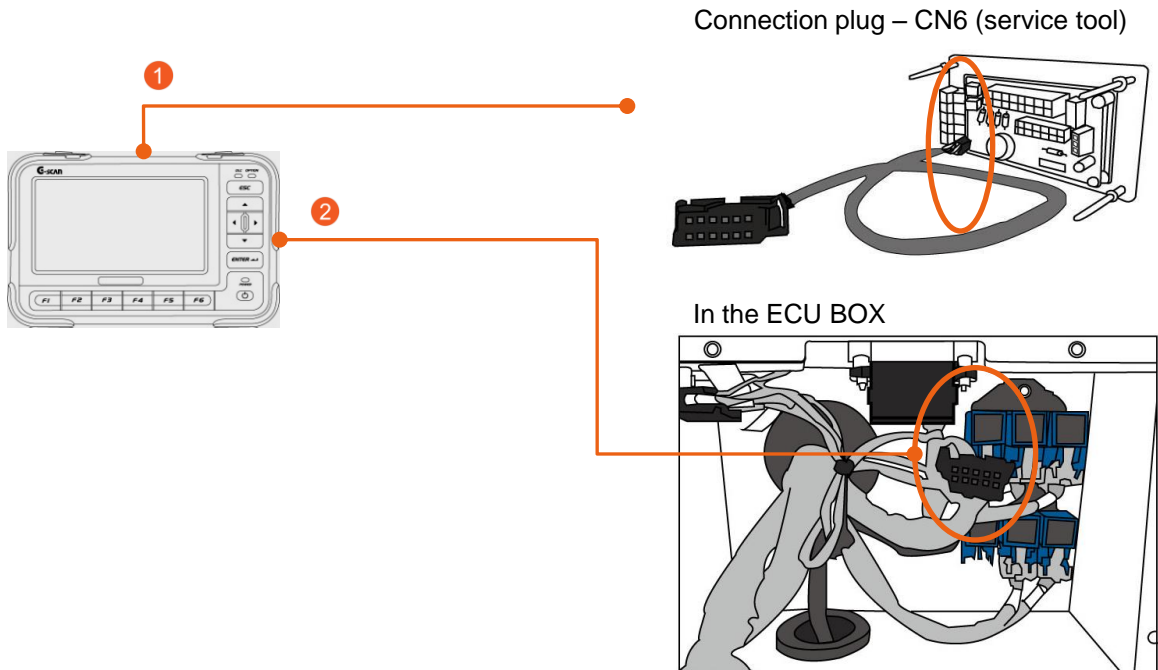



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

### 7. ALARM AND DTC(DIAGNOSIS TROUBLE CODE)

If there is a problem in the engine, the EOI display (audible or visible) alarm and related DTC (diagnosis trouble code) will give you information about it. The DTC display is only for initial assistance and to aid communication with a Hyundai SeasAll dealer if there is an emergency. You should contact your nearest Hyundai SeasAll dealer as soon as possible if a system problem arises.

Note 1) RPM Limit : ● ( Rated rpm - 500rpm), ○ (Rated rpm - 800rpm)

Note 2),3) would be applied to S250/220 models

#### 7.1 ALARM LIST

Item	DTC	Description	Fail safety		Alarm		Expectation Cause(s)
			Fuel cut off	Note 1) RPM limit	Lamp	Buzzer	
VGT variable geometry turbocharger	P2263 P2268 P226(5/6) P2267	GPA failure [PWM failed, Positioning failed, Operating range failed(UMS/LMS), Overheat]	-			√	• Overload, VGT cooling circuit • VGT actuator adaption error • VGT actuator performance error
	P2563	Pwm line Failure					
	P0048	Short circuit battery					
	P0047	Short circuit ground	-	○		√	• VGT actuator circuit • VGT actuator
		No Load					
	P0234	Boost pressure higher than target value					• VGT actuator performance error
P0299	Boost pressure lower than target value	-			√	• Air leakage check • Intercooler • VGT actuator performance error	
APS1 acceleration position sensor1	P2138	Plausibility With Aps2 Violated					
	P2127	Voltage Above Lower Limit					
	P2123	Voltage Above Upper Limit					
	P0643	Supply Voltage Above Upper Limit				√	• APS1/2 sensor circuit • APS sensor • ECM (engine control module)
	P0642	Supply Voltage Below Lower Limit		1250 rpm fixed			
APS2 acceleration position sensor2	P2128	Voltage above upper limit					
	P0653	Supply voltage above upper limit					
	P0652	Supply voltage below lower limit					
CMPS cam position sensor	P0340	No camshaft signal	√	●		√	• CMPS circuit • CMPS
	P0341	Wrong camshaft signal	(at starting)				
CKPS crank position sensor	P0335	No crankshaft signal (engine running)	√	-		√	• CKPS circuit • CKPS • Target wheel check
	P0336	Wrong crankshaft signal (restart)					
Water detection in fuel	P2264	Water in fuel is detected	-	●		√	• Water in fuel, fuel filter (drain out water and check the fuel in fuel tank) • Warning lamp circuit • Water detection sensor error
Cylinder1 injector	P0201	Open load		○			
	P0261	Short circuit ground	√			√	• Injector circuit • Injector
	P0262	Short circuit battery					
	P0263	Defect resistance cylinder1, Charging/discharging energy error	-				
Cylinder2 injector	P0202	Open load		○			
	P0264	Short circuit ground	√			√	• Injector circuit • Injector
	P0265	Short circuit battery					
	P0266	Defect resistance cylinder1, Charging/discharging energy error	-				



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

Item	DTC	Description	Fail safety		Alarm		Possible Cause(s)
			Fuel cut off	Note 1) RPM limit	Lamp	Buzzer	
Cylinder3 injector	P0203	Open load		○			<ul style="list-style-type: none"> <li>• Injector circuit</li> <li>• Injector</li> </ul>
	P0267	Short circuit ground	√	-		√	
	P0268	Short circuit battery					
	P0269	Defect resistance cylinder1, Charging/discharging energy error	-				
Cylinder4 injector	P0204	Open load		○			<ul style="list-style-type: none"> <li>• Injector circuit</li> <li>• Injector</li> </ul>
	P0270	Short circuit ground	√	-		√	
	P0271	Short circuit battery					
	P0272	Defect resistance cylinder1, Charging/discharging energy error	-				
Note 2) Cylinder5 injector	P0205	Open load		○			<ul style="list-style-type: none"> <li>• Injector circuit</li> <li>• Injector</li> </ul>
	P0273	Short circuit ground	√	-		√	
	P0274	Short circuit battery					
	P0275	Defect resistance cylinder1, Charging/discharging energy error	-				
Note 3) Cylinder6 injector	P0206	Open load		○			<ul style="list-style-type: none"> <li>• Injector circuit</li> <li>• Injector</li> </ul>
	P0276	Short circuit ground	√	-		√	
	P0277	Short circuit battery					
	P0278	Defect resistance cylinder1, Charging/discharging energy error	-				
Injector Bank Error	P062D	Bank 1 error	√	-		√	<ul style="list-style-type: none"> <li>• Charging system (battery, alternator check)</li> <li>• ECM</li> </ul>
	P062E	Bank 2 error					
Injectors Circuit	P0611	Error path for short circuit of charging switch is detected	√	-		√	<ul style="list-style-type: none"> <li>• Injectors circuit</li> <li>• ECM</li> </ul>
	P0200	Injector circuit error					
RPS rail pressure sensor	P0193	Voltage above upper limit	-	●		√	<ul style="list-style-type: none"> <li>• PRS circuit</li> <li>• PRS</li> <li>• APS 2 power supply circuit</li> <li>• BPS power supply circuit</li> <li>• ECM</li> </ul>
	P0192	Voltage below lower limit					
	P0653	Supply voltage above upper limit					
	P0652	Supply voltage below lower limit					
Rail pressure Monitoring	P0087	Maximum positive deviation of rail pressure exceeded	-	○		√	<ul style="list-style-type: none"> <li>• Fuel filter</li> <li>• RPS check</li> <li>• P-PRV , PRV check(stuck)</li> </ul>
	P0088	Maximum negative deviation of rail pressure exceeded					
	P1171	Minimum rail pressure exceeded	√	-			
	P1172	Maximum rail pressure exceeded	-	○			
BPS boost pressure sensor	P0238	Voltage above upper limit	-	●		√	<ul style="list-style-type: none"> <li>• BPS circuit</li> <li>• BPS</li> <li>• RPS power supply circuit</li> <li>• APS 2 power supply circuit</li> <li>• ECM</li> </ul>
	P0237	Voltage below lower limit					
	P0069	Not plausible with atmospheric pressure sensor		-	-	-	
	P0653	Supply voltage above upper limit		●		√	
	P0652	Supply voltage below lower limit					



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

Item	DTC	Description	Fail safety		Alarm		Possible Cause(s)
			Fuel cut off	Note 1) RPM limit	Lamp	Buzzer	
PPRV pump pressure regulator valve	P0254	Short circuit to battery of metering unit output	-	○		√	<ul style="list-style-type: none"> <li>• P-PRV circuit</li> <li>• P-PRV</li> </ul>
	P0253	Short circuit to ground of metering unit output	√	-			
		Open load of metering unit output	-	○			
P0252	Powerstage error	-	-	-	-	-	
PRV (rail) pressure regulator valve	P0092	Short circuit to battery of pressure control valve output	√	-		√	<ul style="list-style-type: none"> <li>• PRV circuit</li> <li>• PRV</li> </ul>
	P0091	Short circuit to ground of pressure control valve output					
		Open load of pressure control valve output					
P0089	Powerstage error	-	-	-	-	-	
OPS oil pressure sensor	-	Oil pressure low (below 0.8 bar)	-	-		√	• Oil switch, Oil level, Circuit check
Charging Error	-	Charging system error	-	-		√	• Alternator, Charging circuit check
E(C)TS engine coolant temp. sensor	-	Coolant temperature high (above 110°C)	-	Depending temp.	EOILCD Blinking	√	<ul style="list-style-type: none"> <li>• ECTS circuit</li> <li>• ECTS</li> <li>• Cooling line check</li> </ul>





# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

### 7.2 DTC(DIAGNOSIS TROUBLE CODE) LIST

NO	P code	DESCRIPTION
1	P0016	Crankshaft Position – Camshaft Position Correlation
2	P0047	Turbocharger Boost Control Solenoid Circuit Low
3	P0048	Turbocharger Boost Control Solenoid Circuit High
4	P0069	Manifold Absolute Pressure – Barometric Pressure Correlation
5	P0087	Fuel Rail/System Pressure - Too Low
6	P0088	Fuel Rail/System Pressure - Too High
7	P0089	Fuel Pressure Regulator 1 Performance
8	P0091	Fuel Pressure Regulator 1 Control Circuit Low
9	P0092	Fuel Pressure Regulator 1 Control Circuit High
10	P0097	Intake Air Temperature Sensor 2 Circuit Low
11	P0098	Intake Air Temperature Sensor 2 Circuit High
12	P0107	Atmospheric Pressure Sensor Voltage Lower Limit
13	P0108	Atmospheric Pressure Sensor Voltage Upper Limit
14	P0112	Intake Air Temperature Sensor1 Circuit Low Input
15	P0113	Intake Air Temperature Sensor1 Circuit High Input
16	P0116	Engine Coolant Temperature Circuit Range / Performance
17	P0117	Engine Coolant Temperature Circuit Low Input
18	P0118	Engine Coolant Temperature Circuit High Input
19	P0182	Fuel Temp Sensor A Circuit Low Input
20	P0183	Fuel Temp Sensor A Circuit High Input
21	P0192	Fuel Rail Pressure Sensor Circuit Low input
22	P0193	Fuel Rail Pressure Sensor Circuit High Input
23	P0194	Fuel Rail Pressure Sensor Circuit Intermittent
24	P0200	Injector Circuit Error
25	P0201	Cylinder 1 Injector Open Load
26	P0202	Cylinder 2 Injector Open Load
27	P0203	Cylinder 3 Injector Open Load
28	P0204	Cylinder 4 Injector Open Load
29	*P0205	Cylinder 5 Injector Open Load
30	*P0206	Cylinder 6 Injector Open Load
31	P0231	Fuel Pump Secondary Circuit Low



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

NO	P code	DESCRIPTION
32	P0232	Fuel Pump Secondary Circuit High
33	P0234	Turbocharger Over boost Condition
34	P0237	Turbocharger Boost Sensor "A" Circuit Low
35	P0238	Turbocharger Boost Sensor "A" Circuit High
36	P0252	Pump Pressure Regulation Valve Circuit
37	P0253	Pump Pressure Regulation Valve Circuit Low
38	P0254	Pump Pressure Regulation Valve Circuit High
39	P0261	Cylinder 1 - Injector Circuit Low
40	P0262	Cylinder 1 - Injector Circuit High
41	P0263	Cylinder 1 Contribution/Balance
42	P0264	Cylinder 2 - Injector Circuit Low
43	P0265	Cylinder 2 - Injector Circuit High
44	P0266	Cylinder 2 Contribution/Balance
45	P0267	Cylinder 3 - Injector Circuit Low
46	P0268	Cylinder 3 - Injector Circuit High
47	P0269	Cylinder 3 Contribution/Balance
48	P0270	Cylinder 4 - Injector Circuit Low
49	P0271	Cylinder 4 - Injector Circuit High
50	P0272	Cylinder 4 Contribution/Balance
51	*P0273	Cylinder 5 - Injector Circuit Low
52	*P0274	Cylinder 5 - Injector Circuit High
53	*P0275	Cylinder 5 Contribution/Balance
54	*P0276	Cylinder 6 - Injector Circuit Low
55	*P0277	Cylinder 6 - Injector Circuit High
56	*P0278	Cylinder 6 Contribution/Balance
57	P0299	Turbocharger Under boost
58	P0300	Random/Multiple Cylinder Misfire Detected
59	P0335	Crankshaft Position Sensor A Circuit
60	P0336	Crankshaft Position Sensor A Circuit Range/Performance
61	P0340	Camshaft Position Sensor A Circuit Malfunction



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

NO	P code	DESCRIPTION
61	P0341	Camshaft Position Sensor A Circuit Range/Performance
62	P0381	Glow Plug/Heater Indicator Circuit
63	P0562	System Voltage Low
64	P0563	System Voltage High
65	P0601	Internal Control Module Memory Check Sum Error
66	P0602	Control Module Programming Error
67	P0604	Internal Control Module Random Access Memory (RAM) Error
68	P0605	Internal Control Module Read Only Memory(ROM) Error
69	P0606	ECM/PCM Processor
70	P0611	Injector Circuit Error
71	P062D	Injector Bank1 Error
72	P062E	Injector Bank2 Error
73	P0642	Sensor Reference Voltage "A" Circuit Low
74	P0643	Sensor Reference Voltage "A" Circuit High
75	P0650	Malfunction Indicator Lamp(MIL) Control Circuit
76	P0652	Sensor Reference Voltage "B" Circuit Low
77	P0653	Sensor Reference Voltage "B" Circuit High
78	*P0670	Glow Plug Module Control Circuit
79	*P0671	Cylinder 1 Glow Plug Circuit
80	*P0672	Cylinder 2 Glow Plug Circuit
81	*P0673	Cylinder 3 Glow Plug Circuit
82	*P0674	Cylinder 4 Glow Plug Circuit
83	*P0675	Cylinder 5 Glow Plug Circuit
84	*P0676	Cylinder 6 Glow Plug Circuit
85	*P0683	Glow Control Module Signal
86	*P0684	Glow Control Module Performance
87	P0685	ECM/PCM Power Relay Control Circuit /Open
88	*P0698	Variable Swirl Actuator Voltage Lower Limit
89	*P0699	Variable Swirl Actuator Voltage Upper Limit
90	P1145	Overrun Monitoring



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

NO	P code	DESCRIPTION
91	P1171	Minimum Rail Pressure Exceeded
92	P1172	Maximum Rail Pressure Exceeded
93	P1173	Set Value of PCV not in Plausibility Range
94	P1185	Maximum Pressure Exceeded
95	P1186	Minimum Pressure at Engine Speed Too Low
96	P1187	Regulator Valve Stick
97	P1188	Leakage
98	P1307	Acceleration Sensor Range/Performance
99	P1308	Acceleration Sensor Circuit Low Input
100	P1309	Acceleration Sensor Circuit High Input
101	P1325	Glow Relay Malfunction
102	P1636	Voltage Regulator for Injector
103	P1652	Ignition Key No Signal
104	P1653	After-Run Check Error
105	P1655	Tachometer Output Fault
106	P1670	Invalid Injector IQA/C2I
107	P1671	Injector IQA Checksum Error
108	P1679	EMS Data Fail (Data frame, CS, Message error)
109	P1694	EMS Message Error
110	P1695	EMS Memory Error
111	P1697	HI-SCAN message Error
112	*P2009	Variable Swirl Actuator Control Circuit Low(Bank 1)
113	*P2010	Variable Swirl Actuator Control Circuit High(Bank 1)
114	*P2015	Variable Swirl Actuator Position Sensor/Switch Circuit Range/Performance
115	*P2016	Variable Swirl Actuator Position Sensor/Switch Circuit Low
116	*P2017	Variable Swirl Actuator Position Sensor/Switch Circuit High
117	P2122	Throttle/Pedal Position Sensor/Switch "D" Circuit Low Input
118	P2123	Throttle/Pedal Position Sensor/Switch "D" Circuit High Input
119	P2127	Throttle/Pedal Position Sensor/Switch "E" Circuit Low Input
120	P2128	Throttle/Pedal Position Sensor/Switch "E" Circuit High Input





<b>NO</b>	<b>P code</b>	<b>DESCRIPTION</b>
121	P2138	Throttle/Pedal Position Sensor/Switch "D" / "E" Voltage Correlation
122	P2228	Barometric Pressure Circuit Low Input
123	P2229	Barometric Pressure Circuit High Input
124	P2262	Turbocharger Boost Pressure Not Detected - Mechanical
125	P2263/5/6/7/8	Turbocharger Boost System Performance
126	P2264	Water in Fuel Sensor Circuit
127	*P2562	Turbocharger Boost Control Position Sensor "A" Circuit
128	*P2563	Turbocharger Boost Control Position Sensor "A" Circuit Range/Performance
129	*P2564	Turbocharger Boost Control Position Sensor "A" Circuit Low
130	*P2565	Turbocharger Boost Control Position Sensor "A" Circuit High
131	*P2566	Turbocharger Boost Control Position Sensor "A" Circuit Intermittent
132	U0001	High Speed CAN Communication Bus
133	U0100	Faults in CAN a Transmit Messages

\*Pxxxx codes would be applied to only S250/220 models

### CHAPTER 10

### ANTI CORROSION SYSTEM

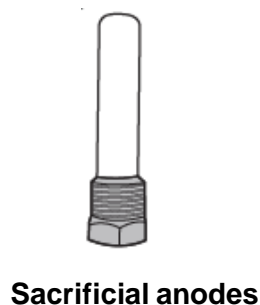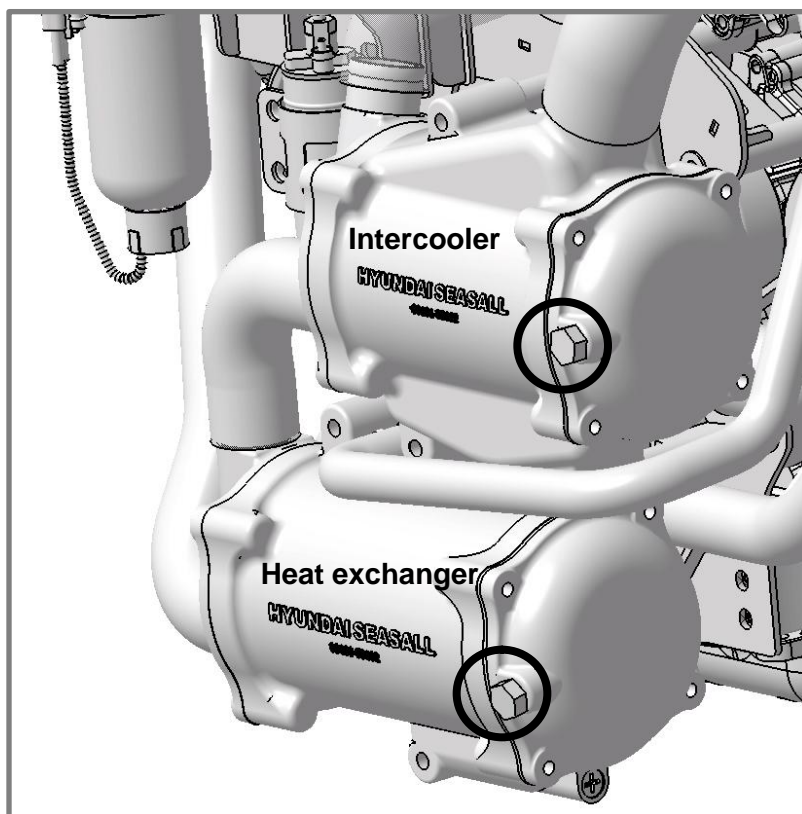

1) Sacrificial anode must be replaced every 250hr

The sacrificial anode should be checked especially frequently when used in saltwater. It is recommended to replace the sacrificial anode at the start of each season.




### CAUTION

- DON'T DRIVE IN THE ABSENCE OF ANODES. IT IS HARMFUL TO YOUR ENGINE.
- CLOSE THE SEAWATER VALVE BEFORE THIS MAINTENANCE.
- MAKE SURE TO CHECK THE ANODE PLUG IN ACCORDANCE WITH THIS MANUAL; DON'T LOOSEN COOLANT DRAIN PLUG.

**CHAPTER 11**  
**ENGINE OPERATION**

**1. ENGINE ON/OFF**

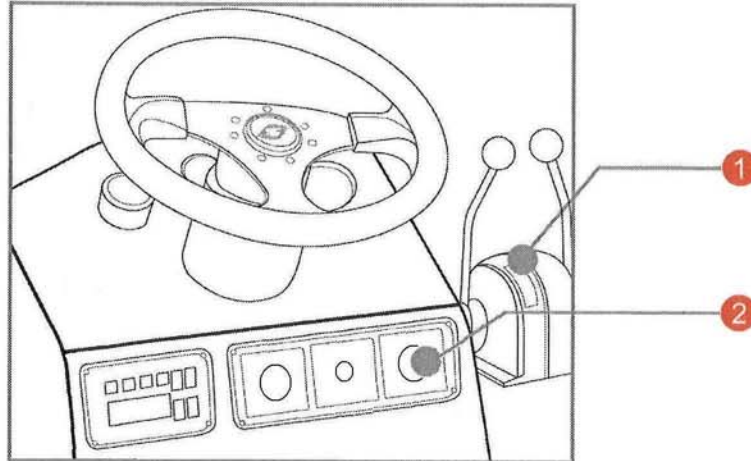

- 1) Before starting the engine, you should check engine oil, coolant, gearbox oil, fuel gauge, raw water pump, battery, and so on.
- 2) When you start the engine, check that the engine throttle lever① is at neutral position. If not, the engine may not start or there is possibility of shooting off. Especially if your boat is equipped with a neutral safety lever, when the engine throttle lever is not at neutral position, you can't crank. You can also check this on the EOI.
- 3) After starting the engine, release the push button ② immediately to prevent damage to the start motor.
- 5) Avoid max. rpm and WOT ( Wide Open Throttle) before the cold engine is fully warmed up.
- 6) At a cold start, it takes a few or more seconds to start the engine.
- 7) If the engine does not start in 10 seconds, release the button. After 10 seconds try again. This method can help avoid start-motor damage.



**WARNING**

**DO NOT DRIVE IN SPACE WHERE THERE IS NO AIR CIRCULATION.  
EMISSION GAS IS HARMFUL.**

## **2. ENGINE BREAK-IN**

### **Initial Break-in Procedure**

The first 20 hours of operation is the engine break-in period. During this period, it is important that the engine is operated as outlined below.

- 1) DO NOT operate engine at idle rpm for extended periods of time during the first 10 hours.
- 2) DO NOT operate at any one constant speed for extended periods of time.
- 3) DO NOT exceed 75% of full throttle during the first 10 hours except during the engine initial Break-In Procedure. After the next 10 hours, occasional operating at full throttle (5 minutes at a time maximum) is permissible.
- 4) AVOID full throttle accelerations from neutral position.
- 5) DO NOT operate at all full throttle until engine reaches normal operating temperature.
- 6) FREQUENTLY CHECK engine oil level and add oil if necessary.

## **3. STOPPING THE ENGINE**

The engine should be run for a few minute at idle (in neutral) before turning it off. This will avoid boiling the cooling system and even out the temperature.

This is especially important if the engine has been operated at high engine speeds and/or with heavy loads.

Shutting down the engine in this fashion will extend the life of your engine.




### **WARNING**

**DO NOT OPERATE IN SPACES WHERE THERE IS NO AIR CIRCULATION.  
EXHAUST GAS IS HARMFUL.**



### 4. EMERGENCY STOP

- 1) You can stop the engine by pushing this switch. After releasing the switch, you can start the engine again.
- 2) When the switch is pressed or it doesn't work normally, the engine doesn't crank. We recommend that you check this switch first if there is any cranking problem.
- 3) You can use this switch to avoid unexpected engine ignition during maintenance.
- 4) You can use this switch for any emergency situation.

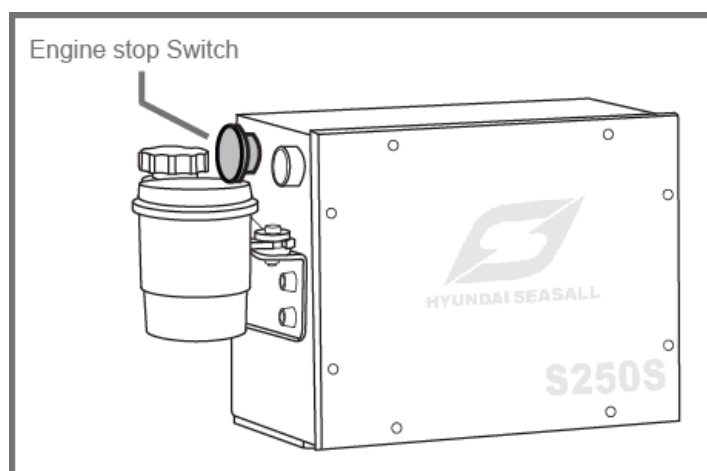

### 5. WINTER OPERATION AND STORAGE

- 1) When using or storing your engine under 0°C, protect the all seawater passing parts (seawater pump, intercooler, heat exchanger) and line (seawater strainer, valve and pipe) from freezing. the sterndrive models especially should trim down fully to prevent trapped water in gear case from freezing.
- 2) The battery capacity decreases as the temperature drops. We recommend recharging the battery frequently. Check and clean all battery cable connections, as oxidized connections lead to voltage drops and starting difficulties.

**CHAPTER 12**  
**ENGINE STORAGE**

The major consideration in preparing your engine for storage is to protect it from rust, corrosion, and damage caused by freezing of trapped water.

The following storage procedures should be followed to prepare your engine for out-of-season storage or prolonged storage (two months or longer and winter storage) :

CHECK LIST
• Visual inspection for leaks and damage
• Change engine oil and oil filter
• Replace fuel filter
• Check air filter element and clean if necessary
• Check engine coolant level and top up if necessary
• Check impeller and replace if necessary
• Check anode and replace if necessary
• Clean the engine
• Flush and drain seawater cooling system
• Fill fuel tank until full and inspect the fuel system
• Remove the battery and store in a cool, dry place



**CAUTION**

**FOR OVER-WINTERING, SEAWATER SHOULD BE DRAINED FULLY BY LOOSENING HEAT EXCHAGER ANODE. REFER TO CHAPTER 10.**



## WINTER STORAGE

Protect your engine from freezing and corrosion damage by following the procedures indicated below.

### • LUBRICATION SYSTEM

- Start the engine and allow it to reach normal operating temperature.
- Turn off the engine. Drain the engine oil using the oil extraction pump. If the oil extraction pump is not installed, drain oil by removing the oil pan drain plug.
- Change the oil and oil filter and refill the engine with new oil according to technical maintenance specifications.
- Check the oil level on the dipstick and if necessary add more oil to reach the correct oil level.

### • FUEL SYSTEM

- Check for fuel leaks where the line from the fuel tank connects to the engine. Tighten or replace the connection if necessary.
- Close the fuel valve. Clean the water separating fuel filter. Replace the filter element.
- After replacing the filter element, open the fuel valve to fill the entire fuel circulation line.
- Fill the fuel tank with fresh fuel to avoid condensation in the fuel tank.
- Close the fuel valve.

### • COOLING SYSTEM

- Close the water valve.
- Connect a freshwater source to the seawater inlet. Run the engine at idle to flush all seawater out of the system.
- Fill the cooling system (seawater side) with a 30~50% solution of anti-freeze. Circulate into the seawater system by running the engine.

### • COOLING SYSTEM

- IF the seawater system is not filled with an antifreeze solution as per the instructions above, completely drain the seawater system by removing the heat exchanger and intercooler anodes.
- Remove the sea water pump impeller and store in a dark place out of sunlight.
- Check all connections with inlet hoses. Tighten or replace the connection if necessary.
- Check the cooling system (heat exchanger, intercooler, thermostat, hoses, clamps, etc.) every 500 hours or every two years, whichever comes first. Replace any worn components.

### • INTAKE SYSTEM

- Remove the air filter from engine.
- Clean the air filter.
- Intake part should be kept hermetically sealed.

### • ELECTRICAL SYSTEM

- Disconnect the battery (-) cable to system ground
- Disconnect the battery (+) cable.
- Clean the battery cable and terminals.
- Coat the terminal connection with a battery terminal anti-corrosion agent.
- Whenever the battery will be stored for an extended period of time, be sure the cells are full of battery is fully charged.



CHAPTER 13
MAINTENANCE

1. THE INITIAL RUNNING CHECK

- BEFORE THE WATER TEST

Table with 3 columns: Check item, Y, N. Rows include: Seawater inlet valve open, Engine coolant level, Cooling system hose clamps tight, Engine oil level, Power steering fluid level, Drive belt tension, All electrical connections tight, EOI warning system operating, Battery fully charged and secured, All fuel connection tight, Exhaust system hose clamps tight, Engine mount tight, Engine alignment, Correct rotation propeller (Installed and torque), Engine coolant and oil drain plug closed, Throttle, shift and steering system fasteners tightened properly.

- AFTER THE WATER TEST

Table with 3 columns: Check item, Y, N. Rows include: Fuel, oil, coolant, water and fluid leaks, Oil and fluid level, Propeller nut torque.

- ON THE WATER TEST

Table with 3 columns: Check item, Y, N. Rows include: Boat drain plug in place (Check before putting boat in water), Seawater pump operation, Seawater strainer correctly mounted, Clean and tightly closed, Engine alignment (propulsion only), Fuel leaks, Oil leaks, Coolant leaks, Water leaks, Exhaust leaks, EOI and gauges operation, Engine emergency stop switch operation, Idle RPM, within specifications, WOT RPM, within specifications (in forward gear).

- PROPULSION CHECKS

Table with 3 columns: Check item, Y, N. Rows include: Stern drive unit oil level, Power trim oil level (stern drives), Drive unit fasteners torque, Power trim cylinders fasteners tight, Propeller nut torque, Transmission fluid level, Steering operation throughout range, Power trim operation (stern drives), Forward - Neutral - Reverse gear operation.



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

### 2. MAINTENANCE SCHEDULE

○ : Check/Clean, ◇ : Check ( Replace if necessary), ● : Replace

Item	Interval	Which ever comes first				
		Daily	Every 250 Hours / 1 years	Every 500 Hours / 2 years	Every 1,000 Hours / 4 years	Every 1,500 Hours / 5 years
Coolant level and leakage <sup>1)</sup>		○				
Sea water strainer		○				
Exhaust system leakage		○				
Fuel system leakage		○				
Engine oil level and leakage		○				
Battery voltage		○				
Steering system oil level and leakage		○				
Transmission <sup>2)</sup> oil level and leakage		○				
Fuel filter and water separator			●			
Engine oil and oil filter			●			
Sacrificial anode			●			
Connection and contamination in electric system.			◇			
Loose of the bolts and nuts.			◇			
Loose and the damaged hose clamps			◇			
Exhaust bellows			◇	●		
Sea water pump impeller			◇	●		
Air filter			◇		●	
Engine Mount			◇		●	
Drive belt				◇		●
Heat Exchanger ( included tube bundle)				◇		●
Intercooler ( included tube bundle)				◇		●
Turbocharger					◇	

1) Replace the coolant every 2 years.

2) For more detailed transmission, follow the transmission manufacturer's manual.

\* NOTE : These procedures are considered normal maintenance.



### CAUTION

YOU SHOULD EXERCISE THE UTMOST CARE TO PREVENT ENGINE DAMAGE OR INJURY TO YOURSELF WHENEVER PERFORMING ANY MAINTENANCE.

### 3. STERNDRIVE & TRANSMISSION MAINTENANCE SCHEDULE

Maintenance item	Maintenance intervals	Whichever comes first	
		Daily	100h / 1year
Check sterndrive unit oil level (Transmission)		●	
Trim pump oil level		●	
Steering fluid level		●	
Check water pickups for debris or marine growth		●	
Check water strainer and clean		●	
Inspect sterndrive unit anodes and replace if 50% eroded		●	
Lubricate propeller shaft and the retorque nut		●	
Touch-up power package paint and spray with Corrosion Guard (Transmission)			●
Change sterndrive unit oil (Transmission)			●
Retorque connection of gimbalring to steering shaft			●
Check steering system and remote control for loose, missing or damaged parts			●
Lubricate cables and linkages			●
Inspect U-joints, splines and bellows. Lubricate U-joints splines			●
Check engine alignment			●
Check gimbal bearing and engine coupler			●
Check continuity circuit for loose or damaged connetions			●
Check Mercathode unit			●

#### Filter replacement (ZF Transmission)

- 1) The first replacement must be preformed after 25 hours of operation.
- 2) The oil must be changed whenever the filter is replaced.



### CAUTION

**YOU SHOULD EXERCISE THE UTMOST CARE TO PREVENT ENGINE DAMAGE OR INJURY TO YOURSELF WHENEVER PERFORMING ANY MAINTENANCE.**



**CHAPTER 14**  
**TROUBLESHOOTING GUIDE**

■ **Starter motor does not crank the engine**

Possible Causes	
• Engine stop switch “ON” position	• Engine is not shifted to neutral position • Wrong neutral switch connection to EOI
• Weak battery or battery connections are loose or corroded	• Starter motor solenoid or slave solenoid failure
• Ignition key switch failure	• Blown fuse at EOI
• Wiring or electrical connection fault	• Defective ECU

■ **Engine cranks but does not start**

Possible Causes	
• Weak battery or bad starter motor	• Low fuel pressure
• No fuel	• Low compression pressure
• ECU not functioning	• Crank position sensor not functioning
• Incorrect starting procedure	• Fuel is not reaching the engine
• Faulty fuel filter or electric fuel pump	• Bad fuel quality or water ingress in fuel
• Faulty fuse	• Faulty injector

■ **Engine starts with difficulty or starts and stalls**

Possible Causes	
• Low fuel pressure in fuel rail	• Not connected fuel return line at injector
• Leakage in high pressure fuel circuit	• Faulty alternator or voltage regulator
• Faulty fuse	• No engine coolant temperature sensor signal
• No rail pressure sensor signal	• Low battery voltage
• Oil level too high or too low	• Low compression pressure
• ECU program error or hardware fault	• Clogged fuel filter

■ **Engine idle is rough**

Possible Causes	
• Not connected fuel return line at injector	• Low compression pressure
• No rail pressure sensor signal	• Poor tightening of injector clamp
• Wiring harness open or poor connection	• Faulty high pressure fuel pump
• Bad fuel quality or water ingress in fuel	• Faulty injector
• Clogged fuel filter / air filter	• Carbon deposit on the injector





### ■ Engine rattling, noisy engine

Possible Causes	
• Compensation of individual injector not adapted	• No engine coolant temperature sensor signal
• Low compression pressure	• Clogged injector return line
• No rail pressure sensor signal	• Faulty injector
• Poor injector O-ring	• Carbon deposit on the injector

### ■ Untimely acceleration / deceleration

Possible Causes	
• Intermittent faulty fuel line connection	• Oil suction
• No rail pressure sensor signal	• ECU program error or hardware fault
• Leakage in intake system	• Damaged turbocharger or leakage in vacuum line
• Clogged fuel filter	• Low compression pressure
• Leakage in high pressure fuel circuit	• Injector needle stuck

### ■ Engine stop

Possible Causes	
• Run out of fuel	• Crank signals missing
• Not connected fuel feed line	• Fuel pressure regulator valve contaminated, stuck, jam-med
• Leakage in high pressure fuel circuit	• Rail pressure regulator valve contaminated, stuck, jam-med
• Fuel out of order	• Faulty alternator or voltage regulator
• Bad fuel quality or water ingress in fuel	• Faulty high/low pressure fuel pump
• Clogged low pressure fuel circuit	• ECU program error or hardware fault

### ■ Performance loss

Possible Causes	
• Compensation of individual injector not adapted	• Leakage at the injector
• Clogged air filter	• Fuel or intake air temperature too high
• Oil level too high or too low	• Engine coolant temperature too high
• Damaged turbocharger or intake air leakage	• Low compression pressure
• Clogged fuel filter	• Poor valve clearance

**CHAPTER 15**  
**WARRANTY**

**HYUNDAI SEASALL RATING CATEGORIES FOR MARINE ENGINE**

**S5 : Pleasure Duty**

- Full power operation restricted to within 10% of total use period
- Cruising speed (RPM) at engine RPM < 90% of rated speed (RPM)
- Operating less than 400 hours per year

**S4 : Special Pleasure Duty / Special Light Duty Commercial**

- Full power operation restricted to within 10% of total use period
- Cruising speed (RPM) at engine RPM < 90% of rated speed (RPM)
- Operating less than 1,000 hours per year

**S3 : Light Duty Commercial**

- Full power operation restricted to within 20% of total use period
- Cruising speed (RPM) at engine RPM < 90% of rated speed (RPM)
- Operating less than 1,500 hours per year

**S2 : Medium Duty Commercial**

- Full power operation restricted to within 30% of total use period
- Cruising speed (RPM) at engine RPM < 90% of rated speed (RPM)
- Operating less than 3,000 hours per year

**S1 : Heavy Duty Commercial**

- Uninterrupted and unlimited use at full power.

**APPLICATION OF WARRANTY COVERAGE**

Warranty coverage is available only to retail customers who purchase from a dealer authorized by Hyundai SeasAll to distribute the product in the country in which the sale occurred, and then only after the Hyundai SeasAll specified pre-delivery inspection process is completed and documented. Warranty coverage becomes available upon proper registration of the product by the authorized dealer. Routine maintenance outlined in the Installation and Operation Manual must be performed in a timely fashion in order to obtain warranty coverage. Hyundai SeasAll reserves the right to make any warranty coverage contingent upon proof of proper maintenance.

This warranty may be rendered invalid at Hyundai SeasAll's discretion based upon:

- 1) Modifications not authorized by Hyundai SeasAll
- 2) Handling errors
- 3) Improperly performed Pre-Delivery Inspection
- 4) Unsuitable fuels, coolant or lubricants
- 5) Using the engine outside of the specified duty cycle rating
- 6) Overloading
- 7) Improperly performed repairs
- 8) Improper maintenance interval(s)
- 9) No submitted Pre-Delivery Inspection Card and Warranty Registration Card



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

### DURATION OF WARRANTY

#### Leisure Applications

Engine	Rating	Base Engine		Extended Major Components (Includes Base Engine Warranty)	
		year	hour	year	hour
S250/D170/U125	S5	2	1,000	4	2,000
**H380/L500	S5	2	-	4	5,000

\*\* Operating less than 1,500 hours per year and Full Power operation < 10% of total use period

- Warranty period is limited by Years or Hours whichever occurs first.
- Major Components : Engine Block Casting, Crankshaft Forging, Connecting Rods, Camshaft Forging, Transmission Cover/Housing, Flywheel Housing, Intake Manifold, Fresh Water Pump Housing and Oil Pan.
- Cylinder Liner or Cylinder Bore scratches are not included in extended major part warranty coverage.

#### Commercial Applications

Engine	Rating	Base Engine		Extended Major Components (Includes Base Engine Warranty)	
		year	hour	year	hour
S250/D170/U125	S4	1	1,000	3	2,000
S220/D150	S3	1	1,500	3	6,500
H380/L500	S1	1	5,000	3	10,000

- Warranty period is limited by Years or Hours whichever occurs first.
- Major Components : Engine Block Casting, Crankshaft Forging, Connecting Rods, Camshaft Forging, Transmission Cover/Housing, Flywheel Housing, Intake Manifold, Fresh Water Pump Housing and Oil Pan.
- Cylinder Liner or Cylinder Bore scratches are not included in extended major part warranty coverage.

Hyundai SeasAll Rating Categories For Marine Auxiliary Engine  
(Ratings in accordance with ISO 8528 )

#### Standby Power

- 1) Operating less than 500 hours per year with average 90% load of the declared Standby Power
- 2) No overload capability is available for this rating.

#### Prime Power

- 1) Average power operation is not exceed 70% of the declared Prime Power.
- 2) A 10% overload is permissible for 1 hour per 12 hours of operation.
- 3) Maximum prime power shall not exceed 500 hours per year.



# INSTALLATION & OPERATION MANUAL

## S250 and S220 Series Engines

HYUNDAI SEASALL

### Marin Auxiliary Engine

Engine	Rating	Base Engine		Extended Major Components (Included Base Engine Warranty)	
		year	hour	year	Hour
L500G	Standby Power	2	1,000	4	3,000
H350G/L460G	Prime Power	1	-	3	10,000

### WARRANTY STARTING DATE

Warranty Begins:

- 1) When engine is delivered to the first retail purchaser
- 2) When the engine is first leased or rented
- 3) When the products reaches the first day of the 7 month after the product has been shipped from Hyundai SeasAll, the warranty date will be started automatically. If you submit the “Pre-Delivery Inspection Card” and “Warranty Registration Card”, the starting date can be changed to the date on your documents.

### WARRANTY REGISTRATION

Warranty Registration Card must be submitted to Hyundai SeasAll within 30 days of the Warranty Starting Date. The Warranty Registration Card identifies information on customer and product, models and serial numbers, date of sale, type of use and the selling dealer etc. *If the ‘Warranty Registration Card’ and ‘Pre-Delivery Inspection Card’ are not approved or not submitted to Hyundai SeasAll within 30 days from Warranty Starting Date , Hyundai SeasAll reserves the right to decline warranty reimbursement.*

### TRANSFER OF WARRANTY COVERAGE BETWEEN OWNERS

This limited warranty is transferable to a subsequent purchaser, but only for the remainder of the unused portion of the limited warranty. To transfer the warranty to the subsequent owner, the revised “Warranty Registration Card” and “Pre-Delivery Inspection Card” should be submitted to Hyundai SeasAll’s distributor or dealer. Upon processing the transfer of warranty, Hyundai SeasAll will verify the warranty registration of the new owner.

### WHAT HYUNDAI SEASALL WILL DO

Hyundai SeasAll will pay for all parts and labor needed to repair the damage to the product resulting from a defect in materials or factory workmanship.

The warranty does not apply to any damage or defect that is the result of abnormal use or carelessness.

The repair or replacement of parts, or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

## **OWNER'S OBLIGATIONS**

It is the owner's obligation to install, operate, maintain and care for Hyundai SeasAll engines in accordance with the instructions and requirements stated in the Installation and Operation Manual.

The owner is responsible for providing enough time and cooperation to get the engine repaired by an authorized dealer, and to deliver it to a proper facility for repair.

The owner is responsible for the cost for warranty inspection, including hauling out, launching and transportation.

## **BUSINESS PARTNER'S OBLIGATIONS**

It is Hyundai SeasAll's Distributor and/or Dealer's responsibility to support the retail customer with prompt diagnosis and repair whether or not the engine was sold by the servicing dealer or by the Distributor responsible for the territory.

It is Hyundai SeasAll's Distributor's responsibility to communicate all warranty issues to the factory in a timely manner so that they can be quickly resolved.

## **HOW TO OBTAIN WARRANTY COVERAGE**

The customer must provide Hyundai SeasAll with a reasonable opportunity to repair the engine, as well as reasonable access to the product for warranty service. Warranty claims shall be made to a Hyundai SeasAll Authorized Repair Facility to service the product. Purchaser shall not, unless requested by Hyundai SeasAll, ship the product or parts of the product directly to Hyundai SeasAll. The warranty registration card is the only valid registration identification and must be presented to the dealer at the time warranty service is requested in order to obtain coverage.

## **WHAT IS COVERED**

Hyundai SeasAll warrants its products to be free of defects in material and workmanship during the warranty period.

## **LIMITATIONS – EXPENDABLE PARTS**

Not included are the following expendable parts:

- Filters : fuel filter, engine oil filter, air filter
- Lubricants : engine oil, coolant, power steering oil.
- Rubber products : seawater pump impeller, rubber hoses, belts, engine coupler, rubber isolation mounts, bellows.
- Gaskets, anodes.

## **WHAT IS NOT COVERED**

- Fuel injector or filter cleaning
- Belt, cable adjustments or lubrication checks made in connection with normal services.
- Damage caused by neglect, lack of maintenance, accidents, abnormal operation, improper installation or service, unapproved modifications or freezing temperatures.
- Haul-out (crane), launching or towing charges, removal and/or replacement of boat partitions or material for necessary access to the product, all related transportation charges and/or travel time, etc.
- All incidental and/or consequential damages (storage charges, telephone or rental charges of any type, inconvenience or loss of time or income) are the owner's responsibility.
- Use of other than Hyundai SeasAll genuine replacement parts when making warranty repairs.
- Participating in or preparing for racing or other competitive activity.
- Water entering the engine via the air inlet filter or exhaust system or submersion. Water in the starter motor.
- Failure of any parts caused by lack of cooling water.
- Damage caused by blockage of the cooling system by foreign matter.
- Use of fuels and lubricants that are not suitable for use with or on the product as specified in the Installation and Operation Manual.
- Normal wear and tear
- Storage damage ( partially painting scratch )
- Cost resulting from ineffective or repeated repairs; improper repairs due to misdiagnosis.
- Owner's personal cost ( indirect loss ) resulting from maintenance.

## **TRANSMISSION AND STERNDRIVE WARRANTIES**

Transmissions and drive systems (ZF Marine, Mercury etc.) are covered under separate warranties, provided and serviced by those companies. For information on those warranties, please see the separate booklets included in the original packaging of your Hyundai SeasAll purchase.

This card is essential for registration of the customer's warranty.  
Please fill out the following registration card in English.

Date of sale

Month	Day	Year

If Warranty Transfer , Check box

**OWNER'S INFORMATION**

Name or Company		E-Mail Address	
Country		State / Province / City	
Operating Location			

**DEALER INFORMATION**

Dealer / Installer		Distributor Name	
City		E-Mail Address	

**ENGINE INFORMATION**

Number of Engines    Single     Dual

Engine Model		Gear Model	
Engine Serial No.		Gear/Drive Serial No.	
		Transom Serial No.	

Engine Model		Gear Model	
Engine Serial No.		Gear/Drive Serial No.	
		Transom Serial No.	

**BOAT INFORMATION**

REPOWER

Manufacturer		Material	Steel <input type="checkbox"/>	Alu. <input type="checkbox"/>	FRP <input type="checkbox"/>	Wood. <input type="checkbox"/>
Model		LOA	ft	Beam	ft	
Boat Type		Hull ID				
Type of Use	Pleasure <input type="checkbox"/>	Commercial <input type="checkbox"/>	Planning <input type="checkbox"/>	Semi Disp. <input type="checkbox"/>	Displacement <input type="checkbox"/>	

Dealer's Instructions: Dealers must complete this card to register the warranty. Please return the copy to your national Importer/Distributor immediately. Unregistered engines are subject to warranty rejection.

**REMARKS**

SIGNATURE : \_\_\_\_\_

NEW THINKING. NEW POSSIBILITIES.

